GS9060 HD-LINX® II SD-SDI and DVB-ASI Deserializer with Loop-Through Cable Driver

GS9060 Data Sheet

Key Features

- SMPTE 259M-C compliant descrambling and NRZI → NRZ decoding (with bypass)
- DVB-ASI sync word detection and 8b/10b decoding
- serial loop-through cable driver output selectable as reclocked or non-reclocked
- dual serial digital input buffers with 2 x 1 mux
- integrated serial digital signal termination
- integrated reclocker
- descrambler bypass option
- adjustable loop bandwidth
- user selectable additional processing features including:
 - TRS, ANC data checksum and EDH CRC error detection and correction
 - programmable ANC data detection
 - illegal code remapping
- internal flywheel for noise immune H, V, F extraction
- FIFO load Pulse
- · 20-bit / 10-bit CMOS parallel output data bus
- 27MHz / 13.5MHz parallel digital output
- automatic standards detection and indication
- Pb-free and RoHS compliant
- 1.8V core power supply and 3.3V charge pump power supply
- 3.3V digital I/O supply
- JTAG test interface
- small footprint compatible with GS1560A, GS1561, GS1532, and GS9062

Applications

- SMPTE 259M-C Serial Digital Interfaces
- DVB-ASI Serial Digital Interfaces

Description

The GS9060 is a reclocking deserializer with a serial loop-through cable driver. When used in conjunction with any Gennum cable equalizer and the GO1555/GO1525* Voltage Controlled Oscillator, a

received solution can be realized for SD-SDI and DVB-ASI applications.

In addition to reclocking an deserializing the input data stream, the GS9060 performs NRZI-to-NRZ decoding, descrambling as per SMPTE 259M-C, and word alignment when operating in SMPTE mode. When operating in DVB-ASI mode, the device will word align the data to K28.5 sync characters and 8b/10b decode the received stream.

Two serial digital input buffers are provided with a 2x1 multiplexer to allow the device to select from one of two serial digital input signals.

The integrated reclocker features a very wide Input Jitter Tolerance of ± 0.3 UI (total 0.6 UI), a rapid asynchronous lock time, and full compliance with DVB-ASI data streams.

An integrated cable driver is provided for serial input loop-through applications and can be selected to output either buffered or reclocked data. This cable driver also features an output mute on loss of signal, high impedance mode, adjustable signal swing.

The GS9060 also includes a range of data processing functions such as error detection and correction, automatic standards detection, and EDH support. The device can also detect and extract SMTPTE 352M payload identifier packets and independently identify the received video standard. This information is read from internal registers via the host interface port.


TRS errors, EDH CRC errors and ancillary data checksum errors can all be detected. A single 'DATA_ERROR' pin is provided which is a logical 'ORing' of all detectable errors. Individual error status is stored in internal 'ERROR_STATUS' registers.

Finally the device can correct detected errors and insert new TRS ID words, ancillary data checksum words, and EDH CRC words. Illegal code re-mapping is also available. All processing functions may be individually enabled or disabled via the host interface control.

The GS9060 is Pb-free, and the encapsulation compound does not contain halogenated flame retardant (RoHS compliant).

*For new designs use GO1555

Functional Block Diagram

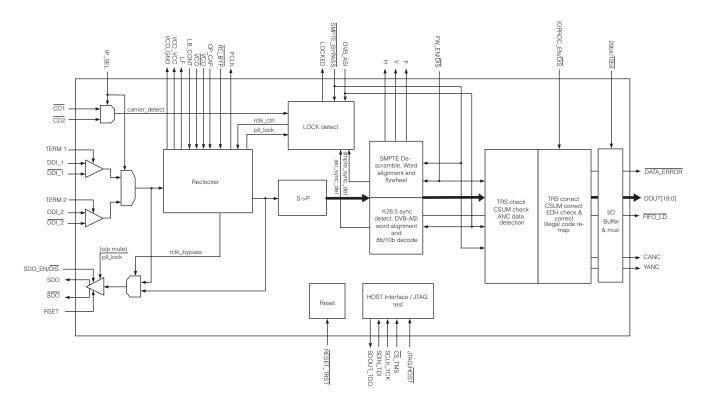



Contents

Ke	y Fea	tures		1			
Ap	plicati	ons		1			
De	script	ion		1			
Fu	nction	al Bloo	ck Diagram	2			
1. Pin Out							
	1.1	ssignment	5				
	1.2	Pin D	escriptions	6			
2.	Elect	rical C	haracteristics	14			
	2.1	Absol	ute Maximum Ratings	14			
	2.2	DC EI	ectrical Characteristics	14			
	2.3	AC EI	ectrical Characteristics	16			
	2.4	Solde	r Reflow Profiles	18			
	2.5	Input/	Output Circuits	19			
	2.6	Host I	nterface Map	21			
		2.6.1	Host Interface Map (R/W registers)	22			
		2.6.2	Host Interface Map (Read only registers)	23			
3.	Detai	led De	scription	24			
	3.1	Functi	ional Overview	24			
	3.2	Serial	Digital Input	24			
		3.2.1	Input Signal Selection	24			
		3.2.2	Carrier Detect Input	25			
		3.2.3	Single Input Configuration	25			
	3.3	Serial	Digital Reclocker	25			
		3.3.1	External VCO	26			
		3.3.2	Loop Bandwidth	26			
	3.4	Serial	Digital Loop-Through Output	26			
		3.4.1	Output Swing	26			
		3.4.2	Reclocker Bypass Control	27			
		3.4.3	Serial Digital Output Mute	27			
	3.5	Serial	-To-Parallel Conversion	28			
	3.6	Lock I	Detect	28			
		3.6.1	Input Control Signals	29			
	3.7	SMPT	E Functionality	30			
		3.7.1	SMPTE Descrambling and Word Alignment	30			
		3.7.2	Internal Flywheel	30			
		3.7.3	Switch Line Lock Handling	31			
		3.7.4	HVF Timing Signal Generation	33			
	3.8	DVB-/	ASI Functionality	34			
		3.8.1	Transport Packet Format	35			
		3.8.2	DVB-ASI 8b/10b Decoding and Word Alignment	35			


GS9060 Data Sheet

GENNUM

	3.8.3	Status Signal Outputs	35
	3.9 Data T	hrough Mode	36
	3.10 Additi	onal Processing Functions	36
	3.10.1	FIFO Load Pulse	36
	3.10.2	Ancillary Data Detection and Indication	37
	3.10.3	SMPTE 352M Payload Identifier	39
	3.10.4	Automatic Video Standard and Data Format Detection	39
	3.10.5	Error Detection and Indication	42
	3.10.6	Error Correction and Insertion	46
	3.10.7	EDH Flag Detection	48
	3.11 Paral	lel Data Outputs	49
	3.11.1	Parallel Data Bus Buffers	49
	3.11.2	Parallel Output in SMPTE Mode	50
	3.11.3	Parallel Output in DVB-ASI Mode	50
	3.11.4	Parallel Output in Data-Through Mode	50
	3.11.5	Parallel Output Clock (PCLK)	51
	3.12 GSPI	Host Interface	51
		Command Word Description	
	3.12.2	Data Read and Write Timing	52
	3.12.3	Configuration and Status Registers	53
	3.13 JTAG	i	54
	3.14 Devic	e Power Up	55
	3.15 Devic	e Reset	55
4.	Application F	Reference Design	56
		I Application Circuit (Part A)	
	4.2 Typica	I Application Circuit (Part B)	57
5.	References	& Relevant Standards	58
6.	Package & C	Ordering Information	59
	6.1 Packa	ge Dimensions	59
	-	ging Data	
		ng Information	
7.	Revision His	tory	61

1. Pin Out

1.1 Pin Assignment

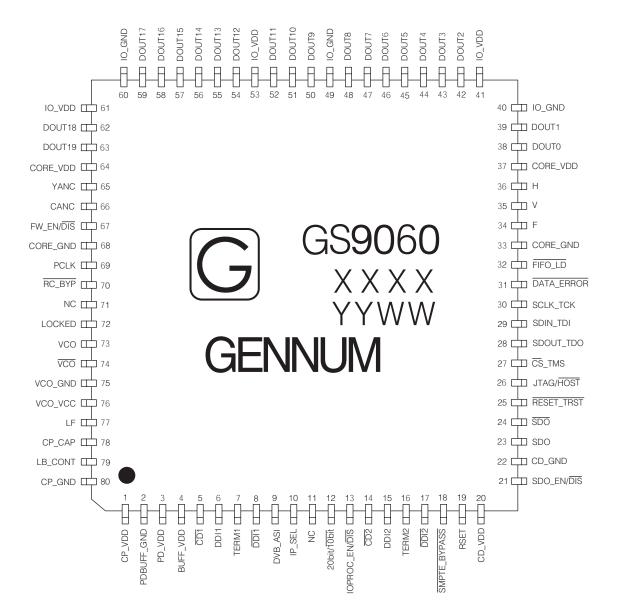

1.2 Pin Descriptions

Table 1-1: Pin Descriptions

Pin Number	Name	Timing	Туре	Description
1	CP_VDD	_	Power	Power supply connection for the charge pump. Connect to +3.3 DC analog.
2	PDBUFF_GND	-	Power	Ground connection for the phase detector and serial digital inpu buffers. Connect to analog GND.
3	PD_VDD	-	Power	Power supply connection for the phase detector. Connect to +1.8V DC analog.
4	BUFF_VDD	-	Power	Power supply connection for the serial digital input buffers. Connect to +1.8V DC analog.
5	CD1	Non Synchronous	Input	STATUS SIGNAL INPUT Signal levels are LVCMOS/LVTTL compatible.
				Used to indicate the presence of a serial digital input signal. Normally generated by a Gennum automatic cable equalizer.
				When LOW, the serial digital input signal received at the DDI1 and DDI1 pins is considered valid.
				When HIGH, the associated serial digital input signal is considered to be invalid. In this case, the LOCKED signal is set LOW and all parallel outputs are muted.
6,8	DDI1, DDI1	Analog	Input	Differential input pair for serial digital input 1.
7	TERM1	Analog	Input	Termination for serial digital input 1. AC couple to PDBUFF_GND.
9	DVB_ASI	Non Synchronous	Input	CONTROL SIGNAL INPUT Signal levels are LVCMOS/LVTTL compatible.
				When set HIGH in conjunction with SMPTE_BYPASS = LOW, th device will be configured to operate in DVB-ASI mode.
				When set LOW, the device will not support the decoding or wor alignment of received DVB-ASI data.
10	IP_SEL	Non Synchronous	Input	CONTROL SIGNAL INPUT Signal levels are LVCMOS/LVTTL compatible.
				Used to select DDI1 / DDI1 or DDI2 / DDI2 as the serial digital input signal, and CD1 or CD2 as the carrier detect input signal.
				When set HIGH, DDI1 / $\overline{\text{DDI1}}$ is selected as the serial digital input and $\overline{\text{CD1}}$ is selected as the carrier detect input signal.
				When set LOW, DDI2 / $\overline{\text{DDI2}}$ serial digital input and $\overline{\text{CD2}}$ carrier detect input signal is selected.
11	NC	-	-	No Connect.
12	20bit/10bit	Non Synchronous	Input	CONTROL SIGNAL INPUT Signal levels are LVCMOS/LVTTL compatible.
				Used to select the output data bus width in SMPTE or Data-Through modes. This signal is ignored in DVB-ASI mode.
				When set HIGH, the parallel output will be 20-bit demultiplexed data.
				When set LOW, the parallel outputs will be 10-bit multiplexed data.

Table 1-1:	Pin	Descriptions	(Continued)
------------	-----	--------------	-------------

Pin Number	Name	Timing	Туре	Description
13	IOPROC_EN/DIS	Non Synchronous	Input	CONTROL SIGNAL INPUT Signal levels are LVCMOS/LVTTL compatible.
				Used to enable or disable I/O processing features.
				When set HIGH, the following I/O processing features of the device are enabled:
				EDH CRC Error Correction
				ANC Data Checksum Correction
				TRS Error Correction
				Illegal Code Remapping
				To enable a subset of these features, keep IOPROC_EN/DIS HIGH and disable the individual feature(s) in the IOPROC_DISABLE register accesible via the host interface.
				When set LOW, the I/O processing features of the device are disabled, regardless of whether the features are enabled in the IOPROC_DISABLE register.
14	CD2	Non Synchronous	Input	STATUS SIGNAL INPUT Signal levels are LVCMOS/LVTTL compatible.
				Used to indicate the presence of a serial digital input signal. Normally generated by a Gennum automatic cable equalizer.
				When LOW, the serial digital input signal received at the DDI2 and DDI2 pins is considered valid.
				When HIGH, the associated serial digital input signal is considered to be invalid. In this case, the LOCKED signal is set LOW and all parallel outputs are muted.
15,17	DDI_2, DDI_2	Analog	Input	Differential input pair for serial digital input 2.
16	TERM2	Analog	Input	Termination for serial digital input 2. AC couple to PDBUFF_GND.
18	SMPTE_BYPASS	Non Synchronous	Input	CONTROL SIGNAL INPUT Signal levels are LVCMOS/LVTTL compatible.
				When set HIGH in conjunction with DVB_ASI = LOW, the device will be configured to operate in SMPTE mode. All I/O processing features may be enabled in this mode.
				When set LOW, the device will not support the descrambling, decoding or word alignment of received SMPTE data. No I/O processing features will be available.
19	RSET	Analog	Input	Used to set the serial digital loop-through output signal amplitude. Connect to CD_VDD through $281\Omega + 1\%$ for $800mV_{p-p}$ single-ended output swing.
20	CD_VDD	_	Power	Power supply connection for the serial digital cable driver. Connect to +1.8V DC analog.

Table 1-1: Pin Descript	tions (Continued)
-------------------------	-------------------

Pin Number	Name	Timing	Туре	Description
21	SDO_EN/DIS	Non Synchronous	Input	CONTROL SIGNAL INPUT Signal levels are LVCMOS/LVTTL compatible.
				Used to enable or disable the serial digital output loop-through stage.
				When set LOW, the serial digital output signals SDO and $\overline{\text{SDO}}$ are disabled and become high impedance.
				When set HIGH, the serial digital output signals SDO and $\overline{\text{SDO}}$ are enabled.
22	CD_GND	-	Power	Ground connection for the serial digital cable driver. Connect to analog GND.
23, 24	SDO, SDO	Analog	Output	Serial digital loop-through output signal operating at 270Mb/s.
				The slew rate of these outputs is automatically controlled to mee SMPTE 259M specifications.
25	RESET_TRST	Non Synchronous	Input	CONTROL SIGNAL INPUT Signal levels are LVCMOS/LVTTL compatible.
				Used to reset the internal operating conditions to default setting and to reset the JTAG test sequence.
				Host Mode (JTAG/HOST = LOW)
				When asserted LOW, all functional blocks will be set to default conditions and all input and output signals become high
				impedance, including the serial digital outputs SDO and SDO.
				Must be set HIGH for normal device operation.
				JTAG Test Mode (JTAG/HOST = HIGH) When asserted LOW, all functional blocks will be set to default and the JTAG test sequence will be held in reset.
				When set HIGH, normal operation of the JTAG test sequence resumes.
26	JTAG/HOST	Non Synchronous	Input	CONTROL SIGNAL INPUT Signal levels are LVCMOS/LVTTL compatible.
				Used to select JTAG Test Mode or Host Interface Mode.
				When set HIGH, CS_TMS, SDOUT_TDO, SDI_TDI and SCLK_TCK are configured for JTAG boundary scan testing.
				When set LOW, \overline{CS} _TMS, SDOUT_TDO, SDI_TDI and SCLK_TCK are configured as GSPI pins for normal host interface operation.
27	CS_TMS	Synchronous with	Input	CONTROL SIGNAL INPUT Signal levels are LVCMOS/LVTTL compatible.
		SCLK_TCK		Chip Select / Test Mode Select
				Host Mode (JTAG/ \overline{HOST} = LOW) CS_TMS operates as the host interface chip select, \overline{CS} , and is active LOW.
				\underline{JTAG} Test Mode (JTAG/ \overline{HOST} = HIGH) CS_TMS operates as the JTAG test mode select, TMS, and is active HIGH.
				NOTE: If the host interface is not being used, tie this pin HIGH.

Pin Number	Name	Timing	Туре	Description
28	SDOUT_TDO	Synchronous with SCLK_TCK	Output	CONTROL SIGNAL OUTPUT Signal levels are LVCMOS/LVTTL compatible. Serial Data Output / Test Data Output Host Mode (JTAG/HOST = LOW)
				SDOUT_TDO operates as the host interface serial output, SDOUT, used to read status and configuration information from the internal registers of the device.
				JTAG Test Mode (JTAG/HOST = HIGH) SDOUT_TDO operates as the JTAG test data output, TDO.
29	SDIN_TDI	Synchronous with	Input	CONTROL SIGNAL INPUT Signal levels are LVCMOS/LVTTL compatible.
		SCLK_TCK		Serial Data In / Test Data Input
				Host Mode (JTAG/HOST = LOW) SDIN_TDI operates as the host interface serial input, SDIN, use to write address and configuration information to the internal registers of the device.
				JTAG Test Mode (JTAG/HOST = HIGH) SDIN_TDI operates as the JTAG test data input, TDI.
				NOTE: If the host interface is not being used, tie this pin HIGH.
30	SCLK_TCK	Non Synchronous	Input	CONTROL SIGNAL INPUT Signal levels are LVCMOS/LVTTL compatible.
				Serial Data Clock / Test Clock.
				Host Mode (JTAG/HOST = LOW) SCLK_TCK operates as the host interface burst clock, SCLK. Command and data read/write words are clocked into the devic synchronously with this clock.
				JTAG Test Mode (JTAG/HOST = HIGH) SCLK_TCK operates as the JTAG test clock, TCK.
				NOTE: If the host interface is not being used, tie this pin HIGH.
31	DATA_ERROR	Synchronous with PCLK	Output	STATUS SIGNAL OUTPUT Signal levels are LVCMOS/LVTTL compatible.
				The DATA_ERROR signal will be LOW when an error within the received data stream has been detected by the device. This pir is a logical 'OR'ing of all detectable errors listed in the internal ERROR_STATUS register.
				Once an error is detected, DATA_ERROR will remain LOW unti the start of the next video frame / field, or until the ERROR_STATUS register is read via the host interface.
				The DATA_ERROR signal will be HIGH when the received data stream has been detected without error.
				NOTE: It is possible to program which error conditions are monitored by the device by setting appropriate bits of the ERROR_MASK register HIGH. All error conditions are detected by default.
32	FIFO_LD	Synchronous with PCLK	Output	CONTROL SIGNAL OUTPUT Signal levels are LVCMOS/LVTTL compatible.
				Used as a control signal for external FIFO(s).
				Normally HIGH but will go LOW for one PCLK period at SAV.

Pin Number	Name	Timing	Туре	Description		
33, 68	CORE_GND	-	Power	Ground connection for the digital core logic. Connect to digital GND.		
34	F	Synchronous with PCLK	Output	STATUS SIGNAL OUT Signal levels are LVCM		
				Used to indicate the OD	DD / EVEN field of the video signal.	
					GH for the entire period of field 2 as the received TRS signals.	
				The F signal will be LON progressive scan syster	<i>W</i> for all lines in field 1 and for all lines in ms.	
35	V	Synchronous with PCLK	Output	STATUS SIGNAL OUT Signal levels are LVCM		
				Used to indicate the por for vertical blanking.	rtion of the video field / frame that is used	
				•	GH for the entire vertical blanking period t in the received TRS signals.	
				The V signal will be LO blanking interval.	W for all lines outside of the vertical	
36	Н	Synchronous with PCLK	Output	STATUS SIGNAL OUT Signal levels are LVCM		
				video data. H signal tim	rtion of the video line containing active ing is configurable via the H_CONFIG bi LE register accessible via the host	
				Active Line Blanking (H	$CONFIG = 0_b$	
				8	GH for the entire horizontal blanking W and SAV TRS words, and LOW efault setting.	
					I_CONFIG = 1 _h) H for the entire horizontal blanking perio t in the received TRS ID words, and LOV	
37, 64	CORE_VDD	-	Power	Power supply connection +1.8V DC digital.	on for the digital core logic. Connect to	
38, 39, 42– 48, 50	DOUT[0:9]	Synchronous with PCLK	Output	PARALLEL DATA BUS Signal levels are LVCM	OS/LVTTL compatible.	
				DOUT9 is the MSB and	DOUT0 is the LSB.	
				20-bit <u>mod</u> e 20bit/10bit = HIGH	Chroma data output in SMPTE mode SMPTE_BYPASS = HIGH DVB_ASI = LOW	
					Data output in Data-Through mode SMPTE_BYPASS = LOW DVB_ASI = LOW	
					Forced LOW in DVB-ASI mode SMPTE_BYPASS = LOW DVB_ASI = HIGH	
				10-bit mode 20bit/10bit = LOW	Forced LOW in all modes.	

Table 1-1: Pin Descriptions (Continued)

Pin Number	Name	Timing	Туре	Description		
40, 49, 60	IO_GND	-	Power	Ground connection for digital I/O buffers. Connect to digital GNE		
41, 53, 61	IO_VDD		Power	Power supply connecti DC digital.	on for digital I/O buffers. Connect to +3.3	
51, 52, 54– 59, 62, 63	DOUT[10:19]	Synchronous with PCLK	Output	PARALLEL DATA BUS Signal levels are LVCMOS/LVTTL compatible. DOUT19 is the MSB and DOUT10 is the LSB.		
				20-bit <u>mod</u> e 20bit/10bit = HIGH	Luma data output in SMPTE mode SMPTE_BYPASS = HIGH DVB_ASI = LOW	
					<u>Data output in Dat</u> a-Through mode SMPTE_BYPASS = LOW DVB_ASI = LOW	
					DVB-ASI data in DVB-ASI mode SMPTE_BYPASS = LOW DVB_ASI = HIGH	
				10-bit mode 20bit/10bit = LOW	Multiplexed Luma and Chroma data output in SMPTE mode SMPTE_BYPASS = HIGH DVB_ASI = LOW	
					<u>Data input in data</u> through mode SMPTE_BYPASS = LOW DVB_ASI = LOW	
					DVB-ASI data in DVB-ASI mode SMPTE_BYPASS = LOW DVB_ASI = HIGH	
65	YANC	Synchronous with PCLK	Output	STATUS SIGNAL OUT Signal levels are LVCN	PUT IOS/LVTTL compatible.	
				Used to indicate the pr stream.	esence of ancillary data in the video	
					ed data (20bit/10bit = HIGH), the YANC en VANC or HANC data is detected in the I LOW otherwise.	
				· · · · ·	data (20bit/10bit = LOW), the YANC signa NC or HANC data is detected anywhere in OW otherwise.	
66	CANC	Synchronous with PCLK	Output	STATUS SIGNAL OUT Signal levels are LVCN	PUT IOS/LVTTL compatible.	
				Used to indicate the pr stream.	resence of ancillary data in the video	
				•	ed data (20bit/10bit = HIGH), the CANC en VANC or HANC data is detected in the and LOW otherwise.	
					data (20bit/10bit = LOW), the CANC signa NC or HANC data is detected anywhere i OW otherwise.	

Table	1-1:	Pin	Descriptions	(Continued)
-------	------	-----	--------------	-------------

Pin Number	Name	Timing	Туре	Description	
67	FW_EN/DIS	Non Synchronous	Input	CONTROL SIGNAL INPUT Signal levels are LVCMOS/L	VTTL compatible.
				Used to enable or disable the device.	e noise immune flywheel of the
				used in the extraction and ge	flywheel is enabled. This flywheel is eneration of TRS timing signals, in etection, and in manual switch line
				When set LOW, the internal correction and insertion is un	flywheel is disabled and TRS navailable.
69	PCLK	_	Output	PARALLEL DATA BUS CLO Signal levels are LVCMOS/L	
				20-bit mode	PCLK = 13.5MHz
				10-bit mode	PCLK = 27MHz
70	RC_BYP	Non Synchronous	Input	CONTROL SIGNAL INPUT Signal levels are LVCMOS/L	VTTL compatible.
					igital output will be a reclocked gardless of whether the device is in hrough mode.
				When set LOW, the serial dig of the input signal in all mode	gital output will be a buffered version es.
71	NC	_	_	No connect.	
72	LOCKED	Synchronous with PCLK	Output	STATUS SIGNAL OUTPUT Signal levels are LVCMOS /	LVTTL compatible.
				correctly received and locked	HIGH whenever the device has d to SMPTE compliant data in ompliant data in DVB-ASI mode.
				It will be LOW otherwise.	
73, 74	VCO, VCO	Analog	Input		ernal VCO reference signal. For s the GO1555/GO1525*, VCO O_GND.
				*For new designs use GO15	55
75	VCO_GND	_	Output Power		ernal voltage controlled oscillator. 8 of the GO1555/GO1525*. This pir
				Should be isolated from all o	ther grounds.
				*For new designs use GO15	55

Table 1-1: Pin Descriptions (Continued)

Pin Number	Name	Timing	Туре	Description
76	VCO_VCC	-	Output Power	Power supply for the external voltage controlled oscillator. Connect to pin 5 of the GO1555/GO1525*. This pin is an output. Should be isolated from all other power supplies. *For new designs use GO1555
77	LF	Analog	Output	Control voltage to external voltage controlled oscillator. Nominally +1.25V DC.
78	CP_CAP	Analog	Input	PLL lock time constant capacitor connection. Normally connected to VCO_GND through 2.2nF.
79	LB_CONT	Analog	Input	Control voltage to set the loop bandwidth of the integrated reclocker. Normally connected to VCO_GND through $40k\Omega$.
80	CP_GND	_	Power	Ground connection for the charge pump. Connect to analog GND.

2. Electrical Characteristics

2.1 Absolute Maximum Ratings

Parameter	Value/Units
Supply Voltage Core	-0.3V to +2.1V
Supply Voltage I/O	-0.3V to +4.6V
Input Voltage Range (any input)	-2.0V to + 5.25V
Ambient Operating Temperature	$-20^{\circ}C \le T_A \le 85^{\circ}C$
Storage Temperature	$-40^{\circ}C \le T_{STG} \le 125^{\circ}C$
Lead Temperature (soldering, 10 sec)	230°C
ESD Protection On All Pins	1kV

NOTES:

1. See reflow solder profiles (Section 2.4 on page 18)

2. MIL STD 883 ESD protection applied to all pins on the device.

2.2 DC Electrical Characteristics

Table 2-1: DC Electrical Characteristics

 $T_A = 0^\circ C$ to 70°C, unless otherwise specified.

Parameter	Symbol	Conditions	Min	Тур	Max	Units	Test Levels	Notes
System								
Operation Temperature Range	T _A	_	0	-	70	°C	-	1
Digital Core Supply Voltage	CORE_VDD	_	1.65	1.8	1.95	V	1	1
Digital I/O Supply Voltage	IO_VDD	_	3.0	3.3	3.6	V	1	1
Charge Pump Supply Voltage	CP_VDD	_	3.0	3.3	3.6	V	1	1
Phase Detector Supply Voltage	PD_VDD	_	1.65	1.8	1.95	V	1	1
Input Buffer Supply Voltage	BUFF_VDD	_	1.65	1.8	1.95	V	1	1
Cable Driver Supply Voltage	CD_VDD	_	1.71	1.8	1.89	V	1	1
External VCO Supply Voltage Output	VCO_VCC	-	2.25	2.50	2.75	V	1	-
+1.8V Supply Current	I _{1V8}	_	-	-	245	mA	1	4
+3.3V Supply Current	I _{3V3}	_	_	-	55	mA	1	_
Total Device Power	P _D	_	-	-	625	mW	5	4

Table 2-1: DC Electrical Characteristics (Continued)

 $T_A = 0^{\circ}C$ to 70°C, unless otherwise specified.

Parameter	Symbol	Conditions	Min	Тур	Max	Units	Test Levels	Notes
Digital I/O								
Input Logic LOW	V _{IL}	-	_	-	0.8	V	1	-
Input Logic HIGH	V _{IH}	-	2.1	-	-	V	1	-
Output Logic LOW	V _{OL}	8mA	_	0.2	0.4	V	1	-
Output Logic HIGH	V _{OH}	8mA	IO_VDD - 0.4	-	-	V	1	-
Input								
Input Bias Voltage	V _B	-	_	1.45	-	V	6	2
RSET Voltage	V _{RSET}	RSET=281Ω	0.54	0.6	0.66	V	1	3
Output								
Output Common Mode Voltage	V _{CMOUT}	75Ω load, RSET=281Ω	0.8	1.0	1.2	V	1	_
			NOTEO					

TEST LEVELS

1. Production test at room temperature and nominal supply voltage with guardbands for supply and temperature ranges.

NOTES

1. All DC and AC electrical parameters within specification.

2. Input common mode is set by internal biasing resistors.

Set by the value of the RSET resistor.
 Loop-through enabled.

 Production test at room temperature and nominal supply voltage with guardbands for supply and temperature ranges using correlated test.
 Production test at room temperature and nominal supply voltage.

- 4. QA sample test.
- 5. Calculated result based on Level 1, 2, or 3.

6. Not tested. Guaranteed by design simulations.

- 7. Not tested. Based on characterization of nominal parts.
- Not tested. Based on existing design/characterization data of similar product.
- 9. Indirect test.

2.3 AC Electrical Characteristics

Table 2-2: AC Electrical Characteristics

 $T_A = 0^{\circ}C$ to 70°C, unless otherwise shown

Parameter	Symbol	Conditions	Min	Тур	Max	Units	Test Levels	Notes
System								
Serial Digital Input Jitter Tolerance	IJT	Nominal loop bandwidth	0.6	-	-	UI	1	1
Slave Mode Asynchronous		No data to SD	-	_	197	us	6,7	2
Lock Time		No data to DVB-ASI	-	-	68	us	6,7	2
Device Latency		SMPTE and Data-Through modes	_	21	_	PCLK	6	_
		DVB-ASI mode	_	11	_	PCLK	6	_
Reset Pulse Width	t _{reset}	_	1	_	_	ms	7	6
Serial Digital Differenti	al Input							
Serial Input Data Rate	DR _{DDI}	-	-	270	-	Mb/s	1	-
Serial Digital Input Signal Swing	ΔV_{DDI}	Differential with internal 100Ω input termination	200	600	1000	mV _{p-p}	1	_
Serial Digital Output								
Serial Output Data Rate	DR _{SDO}	-	-	270	-	Mb/s	1	-
Serial Output Swing	ΔV_{SDO}	RSET = 281Ω Load = 75Ω	_	800	-	mVp-p	1	
Serial Output Rise Time 20% ~ 80%	tr _{SDO}	ORL compensation using recommended circuit	400	550	1500	ps	1	_
Serial Output Fall Time 20% ~ 80%	tf _{SDO}	ORL compensation using recommended circuit	400	550	1500	ps	1	
Serial Output Intrinsic Jitter	t _{IJ}	Pseudorandom and pathological	_	270	350	ps	1	3
Serial Output Duty Cycle Distortion	DCD _{SDO}	_	-	20	-	ps	6,7	4
Parallel Output								
Parallel Clock Frequency	f _{PCLK}	-	13.5	-	27.0	MHz	1	
Parallel Clock Duty Cycle	DC _{PCLK}	_	40	50	60	%	1	
Output Data Hold Time	t _{OH}	-	19.5	-	_	ns	1	5
Output Data Delay Time	t _{OD}	_	_	_	22.8	ns	1	5
Output Data Rise/Fall Time	tr/tf	_	_	_	1.5	ns	6,7	5

Table 2-2: AC Electrical Characteristics (Continued)

 $T_A = 0^{\circ}C$ to 70°C, unless otherwise shown

Parameter	Symbol	Conditions	Min	Тур	Max	Units	Test Levels	Notes
GSPI								
GSPI Input Clock Frequency	f _{SCLK}	_	-	-	6.6	MHz	1	-
GSPI Input Clock Duty Cycle	DC _{SCLK}	_	40	50	60	%	6,7	_
GSPI Input Data Setup Time		-	0	-	-	ns	6,7	-
GSPI Input Data Hold Time		-	1.43	-	-	ns	6,7	-
GSPI Output Data Hold Time		-	2.10	-	-	ns	6,7	-
GSPI Output Data Delay Time		-	_	-	7.27	ns	6,7	-

TEST LEVELS

1. Production test at room temperature and nominal supply voltage with guardbands for supply and temperature ranges.

Production test at room temperature and nominal supply voltage with guardbands for supply and temperature ranges using correlated test.

3. Production test at room temperature and nominal supply voltage.

4. QA sample test.

- 5. Calculated result based on Level 1, 2, or 3.
- 6. Not tested. Guaranteed by design simulations.
- 7. Not tested. Based on characterization of nominal parts.
- 8. Not tested. Based on existing design/characterization data of similar product.
- 9. Indirect test.

NOTES

- 1. 6MHz sine wave modulation.
- 2. SD = 525i
- 3. Serial Digital Output Reclocked ($\overline{RC}BYP = HIGH$).

4. Serial Duty Cycle Distortion is defined here to be the difference between the width of a '1' bit, and the width of a '0' bit.

- 5. With 15pF load.
- 6. See Section 3.15 on page 55, Figure 3-15.

2.4 Solder Reflow Profiles

The device is manufactured with Matte-Sn terminations and is compatible with both standard eutectic and Pb-free solder reflow profiles. The recommended standard eutectic reflow profile is shown in Figure 2-1. MSL qualification was performed using the maximum Pb-free reflow profile shown in Figure 2-2.

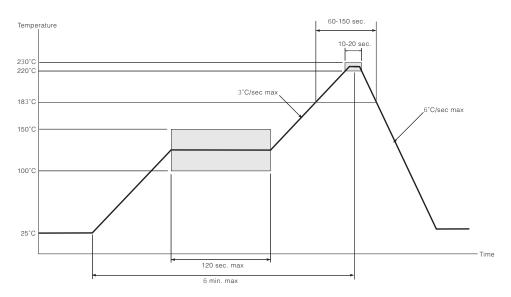


Figure 2-1: Standard Eutectic Solder Reflow Profile

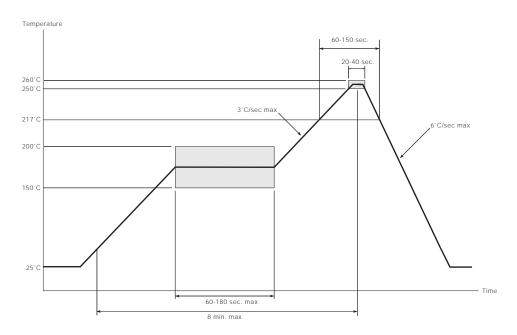



Figure 2-2: Maximum Pb-free Solder Reflow Profile (Pb-free package)

2.5 Input/Output Circuits

DDI \bigcirc $50 \neq 45K$ 150K $\overline{DDI} \bigcirc$

All resistors in ohms, all capacitors in farads, unless otherwise shown.



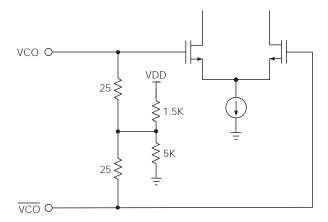


Figure 2-4: VCO Input



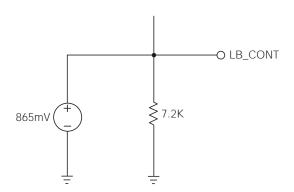


Figure 2-5: PLL Loop Bandwidth Control





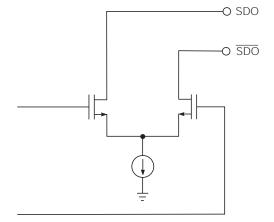

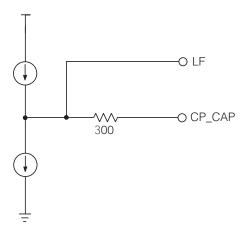

Σ
2
Ş
Ű

GS9060 Data Sheet

2.6 Host Interface Map

	SAV_ERR_ EAV_ERR_ MASK MASK	b1 b0	b1 b0	b1 b0	b1 b0	b1 b0		b1 b0							03-b1												
	Not Used	b2	b2	b2	b2	b2	b2		b2	b2 b2	b2 b2 b2	b2 b2 b2	b2 b2 b2 b2 b2	b2 b2 b2 b2 b2 b2	b2 b2 b2 b2 b2 VF03-b2	b2 b2 b2 b2 b2 VF03-b2 VF01-b2	b2 b2 b2 b2 b2 b2 vFO3-b2 vFO1-b2	b2 b2 b2 b2 b2 b2 b2 b2 vF03-b2 vF01-b2	b2 b2 b2 b2 b2 b2 vF03-b2 vF01-b2 b2	b2 b2 b2 b2 b2 b2 vF01-b2 vF01-b2 vF01-b2	b2 b2 b2 b2 b2 b2 vF03-b2 vF01-b2 b2 b2 b2	b2 b2 b2 b2 b2 b2 b2 VF01-b2 VF01-b2 b2 b2 b2	b2 b2 b2 b2 b2 b2 b2 vFO3-b2 vFO1-b2 b2 b2 b2 b2 b2	b2 b2 b2 b2 b2 vF03-b2 vF01-b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b	b2 b2 b2 b2 b2 b2 vF03-b2 vF01-b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b	b2 b2 b2 b2 b2 b2 vF03-b2 vF01-b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b	b2 b2 b2 b2 b2 b2 b2 vF01-b2 vF01-b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b2 b
	Not Used	b3	b3	b3	b3	b3	b3		b3	b3 b3	b3 b3	b3 b3 b3	p3 p3 p3 p3	b3 b	b3 b3 b3 b3 b3 VFO3-b3	b3 b3 b3 b3 b3 VFO3-b3 VFO1-b3	b3 b3 b3 b3 b3 vF03-b3 vF01-b3	b3 b3 b3 b3 b3 vF03-b3 vF01-b3	b3 b3 b3 b3 b3 vF03-b3 vF01-b3 b3	63 b3 b3 b3 b3 b3 b3 b3 b3 vF03-b5 b3 vF01-b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b	63 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3	b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b	b3 b3 b3 b3 b3 b3 b3 c4 c7 c1-b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b	63 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3 b3	63 63 63 63 63 63 63 7 7 7 7 7 63 63 63 63 63 63 63 63 63 63	63 63 63 63 63 163 163 163 163	63 63 63 63 63 63 7 7 7 7 7 7 63 63 63 63 63 63 63 63 7 7 7 7 7 7 7 7 7 7 7 7 7
	Not Used	b4	b4	b4	b4	b4	b4		b4	b4 b4	b4 b4 b4	b4 b4 b4	b4 b4 b4 b4	b4 b4 b4 b4 b4	b4 b4 b4 b4 b4 VFO3-b4	b4 b4 b4 b4 b4 VFO3-b4 VFO3-b4	b4 b4 b4 b4 b4 VFO3-b4 VFO1-b4	b4 b4 b4 b4 b4 VF03-b4 VF01-b4	b4 b4 b4 b4 VF03-b4 VF01-b4 b4	b4 b4 b4 b4 VF03-b4 VF01-b4 b4 b4	b4 b4 b4 b4 b4 VF03-b4 VF01-b4 b4 b4 b4	b4 b4 b4 b4 b4 b4 VF03-b4 VF01-b4 b4 b4 b4	b4 b4 b4 b4 b4 VF03-b4 VF03-b4 b4 b4 b4 b4	b4 b4 b4 b4 b4 VF03-b4 VF07-b4 b4 b4 b4 b4 Not Used	b4 b4 b4 b4 b4 vF03-b4 vF01-b4 vF01-b4 b4 b4 b4 b4 b4 b4 b4 Not Used	b4 b4 b4 b4 b4 vF03-b4 vF01-b4 vF01-b4 b4 b4 b4 b4 b4 b4 b4 b4 b4 b4 b4 b4 b	b4 b4 b4 b4 b4 VF03-b4 VF01-b4 b4 b4 Not Used Not Used
, ,	CS_ERR_ MASK	b5	p5	b5	p5	b5	b5		b5	b5 b5	b5 b5 b5	b5 b5 b5	b5 b5 b5	b5 b5 b5 b5	b5 b5 b5 b5 b5 VFO3-b5	b5 b5 b5 b5 b5 VFO3-b5 VFO1-b5	b5 b5 b5 b5 b5 VFO3-b5 VFO1-b5	b5 b5 b5 b5 b5 VF03-b5 VF01-b5	b5 b5 b5 b5 b5 VF03-b5 b5 b5	b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5	b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5	b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b	b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b	b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b	b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b	b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b	b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b5 b
	Not Used	9q	b6	b6	b6	b6	b6		b6	b6 b6	b6 b6	b6 b6 b6	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	00 00 00 00 00	b6 b6 b6 VF03-b6	b6 b6 b6 b6 VF03-b6 VF01-b6	b6 b6 b6 b6 b6 VFO3-b6 VFO1-b6	b6 b6 b6 b6 vFO3-b6 vFO1-b6	b6 b6 b6 b6 b6 VFO1-b6 b6 b6	b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 b	b6 b6 b6 b6 b6 VF03-b6 b6 b6 b6	b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 b6	b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 b	b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 Not Used	b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 h6 h6 h6 h6 h6 h6 h6 h6 h6 h6 h6 h6 h6	b6 b6 b6 b6 b6 b6 b6 b6 b6 h6 h0 c1 c2 c2 c2 c2 c2 c2 c2 c2 c2 c2 c2 c2 c2	b6 b6 b6 b6 b6 b6 b6 b6 b6 h0 t1 b6 h0 t1 b6 h1 b6 h1 b6 h1 b6 h1 b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 b6 b6
	LOCKERR_MASK	b7	b7	b7	b7	b7	b7		b7	b7 b7	b7 b7 b7	b7 b7 b7 b7	b7 b7 b7 b7 b7	b7 b7 b7 b7 b7	b7 b7 b7 b7 VF03-b7 VF03-b7	b7 b7 b7 b7 b7 VFO3-b7 VFO1-b7	b7 b7 b7 b7 VF03-b7 VF03-b7 VF01-b7	b7 b7 b7 b7 b7 VF03-b7 VF01-b7	b7 b7 b7 b7 b7 VF03-b7 VF01-b7 b7	b7 b7 b7 b7 vFO3-b7 vFO1-b7 b7 b7	b7 b7 b7 b7 VF03-b7 VF01-b7 b7 b7	b7 b7 b7 b7 VF03-b7 VF01-b7 b7 b7 b7	67 b7 b7 b7 b7 vF01-b7 b7 b7 b7 b7	b7 b7 b7 b7 b7 vF01-b7 vF01-b7 b7 b7 b7 Not Used	b7 b7 b7 b7 b7 vF03-b7 vF01-b7 b7 b7 b7 b7 b7 b7 b7 b7 b7 b7 b7 b7 b	b7 b7 b7 b7 b7 VFO3-b7 VFO1-b7 b7 b7 b7 b7 b7 b7 b7 b7 b7 b7 b7 b7 b	b7 b7 b7 b7 b7 vF03-b7 vF01-b7 b7 b7 b7 b7 b7 b7 ho1Used h1 FF-IDH
	AP_CRC_ ERR_MASK	b8	b8	b8	b8	b8	b8		b8	b8 b8	8d 8d 8d 8d	8d 8d 8d 8d	8d 8d 8d 8d 8d 8d 8d	89 89 89 89 89 89	b8 b8 b8 b8 VF04-b0	b8 b8 b8 b8 VFO4-b0 VFO2-b0	b8 b8 b8 b8 b8 VFO2-b0 VFO2-b0	b8 b8 b8 b8 b8 b8 VFO2-b0 VFO2-b0	b8 b8 b8 b8 b8 b8 VFO2-b0 VFO2-b0 b8	b8 b8 b8 b8 b8 VFO4-b0 VFO2-b0 b8 b8	b8 b8 b8 b8 b8 b8 FO2-b0 VFO2-b0 b8 b8 b8 b8	b8 b8 b8 b8 b8 b8 FO2-b0 VFO2-b0 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8	b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b	b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b	b8 b8 b8 b8 b8 b8 VFO2-b0 VFO2-b0 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b1 b8 b1 b1 b1 b1 b1 b1 b1 b1 b1 b1 b1 b1 b1	b8 b8 b8 b8 b8 vFC04-b0 vFC02-b0 b8 b8 b8 b8 b8 b8 b8 b8 b8 b1 b8 b1 b8 b1 b8 b1 b8 b1 b8 b1 b8 b1 b1 b1 b1 b1 b1 b1 b1 b1 b1 b1 b1 b1	b8 b8 b8 b8 b8 b8 vF02-b0 vF02-b0 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8 b8
	FF_CRC_ ERR_MASK	6q	6q	6q	6q	6q	6q		6q	60	6d 6d	69 69 69	60 60 60 60	69 69 69 69 69	b9 b9 b9 VF04-b1	b9 b9 b9 b9 VFO4-b1 VFO2-b1	99 99 99 99 104-61 1702-61	99 99 99 99 99 1604-b1 1602-b1	b9 b9 b9 b9 b9 vFO2-b1 vFO2-b1 b9 b9	b9 b9 b9 b9 b9 b9 b9 b9 b9	b9 b9 b9 b9 b9 b9 b9 b9 b9 b9	b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b	b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b	b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b	b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 b	09 09 09 09 09 09 09 09 09 09 09 09 09 0	b9 b9 b9 b9 b9 b9 b9 b9 b9 b9 FF-UES FF-CRC_ERR
	VD_STD_ ERR_MASK	Not Used	Not Used	Not Used	Not Used	Not Used	Not Used		Not Used			Jsed	Jsed	pase	Jsed Jsed 4-b2	Jsed Jsed 4-b2 2-b2	Jsed Jsed 4-b2 2-b2	Jsed Jsed 2-b2	Jsed Jsed 2-b2 2-b2	Jsed Jsed 2-b2	Jsed Jsed 2-b2	Jsed 4-b2 2-b2	Jsed 4-b2 2-b2	2sed 2-b2 2-b2 00			
	Not Used	Not Used N	Not Used N	Not Used N	Not Used N	Not Used N	Not Used N		Not Used N					Used Used Used	Used Used 4-b3												
	Not Used	Not Used	Not Used	Not Used	Not Used	Not Used	Not Used		Not Used	Not Used Not Used	Not Used Not Used Not Used	Not Used Not Used Not Used Not Used	Not Used Not Used Not Used Not Used Not Used	Not Used Not Used Not Used Not Used Not Used	Not Used Not Used Not Used Not Used Not Used Vot Used	Not Used Not Used Not Used Not Used Not Used Not Used VFO4-b4 VFO2-b4	Not Used Not Used Not Used Not Used Not Used Not Used VFO2-b4	Not Used Not Used Not Used Not Used Not Used VFO2-b4 VFO2-b4	Not Used Not Used Not Used Not Used Not Used VFO2-b4 b12	Not Used Not Used Not Used Not Used Not Used Not Used VFO2-b4 VFO2-b4 D12 b12	Not Used Not Used Not Used Not Used Not Used Not Used Not 254 VFO2-b4	Not Used Not Used Not Used Not Used Not Used Not Used Not Used Not 254 b12 b12 b12 b12	Not Used Not Used Not Used Not Used Not Used Not Used Not Used Di12 b12 b12 b12 b12 b12	Not Used Not Used Not Used Not Used Not Used Not Used VFO2-b4 b12 b12 b12 b12 b12 b12 b12 b12 b12 b12	Not Used Not Used Not Used Not Used Not Used FO4 Used FO2-b4 b12 b12 b12 b12 b12 b12 vD5-b2 h12 vD5-b2 h12 vD5-b2 h12 h12 h12 h12 h12 h12 h12 h12 h12 h1	Not Used Not Osed Not Used Not Used Not Used Not Used Not Used Not Verse Not Verse No	Not Used Not Used Not Used Not Used Not Used Not Used b12 b12 b12 b12 b12 b12 b12 b12 b12 vtC2b4 b12 vtC2b4 b12 vtC2b4 b12 vtC2b4 b12 vtC2b4 b12 vtC2b4 vtC2
	Not Used	Not Used	Not Used	Not Used	Not Used	Not Used	Not Used		Not Used	Not Used Not Used	Not Used Not Used Not Used	Not Used Not Used Not Used	Not Used Not Used Not Used Not Used	Not Used Not Used Not Used Not Used Not Used	Not Used Not Used Not Used Not Used Not Used Not Used VFO4-b5	Not Used Not Used Not Used Not Used Not Used Not Used VFO4-b5 VFO2-b5	Not Used Not Used Not Used Not Used VF04-b5 VF02-b5	Not Used Not Used Not Used Not Used VF04-b5 VF02-b5	Not Used Not Used Not Used Not Used VFO4-b5 VFO2-b5 b13	Not Used Not Used Not Used Not Used Not Used VF04-b5 VF02-b5 b13 b13	Not Used Not Used Not Used Not Used Not Used VF04-b5 VF022-b5 b13 b13	Not Used Not Used Not Used Not Used Not Used VFO2-b5 b13 b13 b13 b13	Not Used Not Used Not Used Not Used Not Used Not Used b13 b13 b13 b13 b13	Not Used Not	Not Used Not Used Not Used Not Used Not Used VF04-b5 VF02-b5 b13 b13 b13 b13 b13 b13 b13 b13 b13 b13	Not Used Not	Not Used Not Used Not Used Not Used Not Used VFO4-b5 VFO2-b5 b13 b13 b13 b13 b13 b13 b13 b13 b13 b13
	Not Used	Not Used	Not Used	Not Used	Not Used	Not Used	Not Used		Not Used	Not Used Not Used	Not Used Not Used Not Used	Not Used Not Used Not Used	Not Used Not Used Not Used Not Used	Not Used Not Used Not Used Not Used Not Used	Not Used Not Used Not Used Not Used Not Used Not Used	Not Used Not Used Not Used Not Used Not Used VF04-b6 VF02-b6	Not Used Not Used Not Used Not Used VF04-b6 VF02-b6	Not Used Not Used Not Used Not Used VFO4-b6 VFO2-b6	Not Used Not Used Not Used Not Used VFO4-b6 VFO2-b6	Not Used Not Used Not Used Not Used VF04-b6 VF02-b6 b14 b14	Not Used Not Used Not Used Not Used Not Used VFC4-b6 VFC2-b6 b14 b14	Not Used Not Used Not Used Not Used Not Used VFO4-b6 VFO2-b6 b14 b14 b14	Not Used Not Used Not Used Not Used Not Used VFO2-b6 VFO2-b6 b14 b14 b14 b14 b14	Not Used Not Used Not Used Not Used Not Used Not Used Not Used b14 b14 b14 b14 b14 b14 b14 b14	Not Used Not Used Not Used Not Used VF04-b6 VF02-b6 b14 b14 b14 b14 b14 b14 b14 b14 b14 b14	Not Used Not Used Not Used Not Used VF04-b6 VF04-b6 b14 b14 b14 b14 b14 b14 b14 b14 b14 b14	Not Used Not Used Not Used Not Used Not Used VFO2-b6 b14 b14 b14 b14 b14 b14 b14 b14 b14 b14
	Not Used	Not Used	Not Used	Not Used	Not Used	Not Used	Not Used		Not Used	Not Used Not Used	Not Used Not Used Not Used	Not Used Not Used Not Used	Not Used Not Used Not Used Not Used	Not Used Not Used Not Used Not Used Not Used	Not Used Not Used Not Used Not Used Not Used VFO4-b7	Not Used Not Used Not Used Not Used Not Used VFO4-b7 VFO2-b7	Not Used Not Used Not Used Not Used VF04-b7 VF02-b7	Not Used Not Used Not Used Not Used VFO4-b7 VFO2-b7	Not Used Not Used Not Used Not Used VFO4-b7 VFO2-b7	Not Used Not Used Not Used Not Used VFO2-b7 VFO2-b7 b15 b15	Not Used Not Used Not Used Not Used VFO4-b7 VFO2-b7 b15 b15 b15 b15	Not Used Not Used Not Used Not Used Not Used VFO4-b7 VFO2-b7 VFO2-b7 b15 b15 b15	Not Used Not Used Not Used Not Used VFO2-b7 VFO2-b7 b15 b15 b15 b15 b15 b15	Not Used Not Used Not Used Not Used Not Used VFO2-b7 VFO2-b7 b15 b15 b15 b15 b15 b15 b15 b15 b15 b15	Not Used Not Used Not Used Not Used Not Used VFO2-b7 VFO2-b7 b15 b15 b15 b15 b15 b15 b15 b15 b15 b15	Not Used Not Used Not Used Not Used Not Used VFO4-b7 VFO2-b7 b15 b15 b15 b15 b15 b15 b15 b15 b15 b15	Not Used Not Used Not Used Not Used Not Used VFO2-b7 VFO2-b7 b15 b15 b15 b15 b15 b15 b15 b15 b15 b15
S	1Ah	19h	18h	17h	16h	15h	14h	101	13h	13h	13h 11h	17 17 13 14 17 13	137 14 14 15 14 14 14 14 14 14 14 14 14 14 14 14 14	11 11 0년 11 11 13 13 13 13	11 11 00 00 00 00	131 14 05 05 14 14 14 14 14 14 14 14 14 14 14 14 14	11 12 00 00 00 00 00 00 00 00 00 00 00 00 00	13h 12h 11h 05h 05h 08h 08h 08h	13h 12h 11h 11h 05h 05h 08h 08h 08h 08h 08h	11 11 11 11 11 11 11 11 11 11 11 11 11	133 11 11 11 12 11 11 11 11 11 11 11 11 11 1	133 121 101 101 101 001 001 001 001 001 001	133 121 111 111 111 111 111 111 111 111	133 121 111 111 111 111 111 111 111 111	133 121 111 111 111 111 111 111 111 111	133 1111 1111 1111 1111 1111 1111 1111	133 122 111 111 111 111 111 111 111 111
	ERROR_MASK	FF_LINE_END_F1	FF_LINE_START_F1	FF_LINE_END_F0	FF_LINE_START_F0	AP_LINE_END_F1	AP_LINE_START_F1	AP LINE END FO	-	AP_LINE_START_F0	AP_LINE_START_F0 RASTER_STRUCTURE4	AP_LINE_START_F0 RASTER_STRUCTURE4 RASTER_STRUCTURE3	AP_LINE_START_F0 RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE3	AP_LINE_START_F0 RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE2 RASTER_STRUCTURE2	AP_LINE_START_PO RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE2 RASTER_STRUCTURE2 RASTER_STRUCTURE1 VIDE0_FORMAT_OUT_B	AP_LINE_START_PO RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE2 RASTER_STRUCTURE1 VIDE0_FORMAT_OUT_B	AP_LINE_STATL_F0 RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE2 RASTER_STRUCTURE1 VIDE0_F0RMAT_OUT_B VIDE0_F0RMAT_OUT_A	AP_LINE_START_PO RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE3 RASTER_STRUCTURE3 RASTER_STRUCTURE1 VIDE0_FORMAT_OUT_B VIDE0_FORMAT_OUT_B	AP_LINE_START_PO RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE3 RASTER_STRUCTURE1 RASTER_STRUCTURE1 VIDEO_FORMAT_OUT_B VIDEO_FORMAT_OUT_B	AP_LINE_START_PO RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE3 RASTER_STRUCTURE2 RASTER_STRUCTURE1 RASTER_STRUCTURE1 RASTER_STRUCTURE1 NUDE0_FORMAT_OUT_A ANC_TYPE5	AP_LINE_START_PO RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE2 RASTER_STRUCTURE2 RASTER_STRUCTURE1 VIDE0_FORMAT_OUT_A ANC_TYPE5 ANC_TYPE3	AP_LINE_START_PO RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE2 RASTER_STRUCTURE1 UDE0_FORMAT_OUT_B VIDE0_FORMAT_OUT_A ANC_TYPE5 ANC_TYPE5 ANC_TYPE3 ANC_TYPE3	AP_LINE_START_PO RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE2 RASTER_STRUCTURE1 VIDE0_FORMAT_OUT_B VIDE0_FORMAT_OUT_A ANC_TYPE5 ANC_TYPE5 ANC_TYPE3 ANC_TYPE1 ANC_TYPE1	AP_LINE_START_PO RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE3 RASTER_STRUCTURE1 VIDEO_FORMAT_OUT_B VIDEO_FORMAT_OUT_B ANC_TYPE4 ANC_TYPE4 ANC_TYPE4 ANC_TYPE2 ANC_TYPE2 ANC_TYPE2 ANC_TYPE2 ANC_TYPE2 ANC_TYPE2	AP_LINE_START_PO RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE3 RASTER_STRUCTURE1 VIDEO_FORMAT_OUT_B VIDEO_FORMAT_OUT_B ANC_TYPE5 ANC_TYPE5 ANC_TYPE3 ANC_TYPE3 ANC_TYPE3 ANC_TYPE3 ANC_TYPE3 CTTCTTE2 ANC_TYPE3	AP_LINE_START_F0 RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE2 RASTER_STRUCTURE2 RASTER_STRUCTURE2 RASTER_STRUCTURE3 RANC_TYPE5 ANC_TYPE5 ANC_TYPE5 ANC_TYPE5 ANC_TYPE2 ANC_TYPE2 ANC_TYPE2 ANC_TYPE2 EDH_FLAG EDH_FLAG	AP_LINE_START_F0 RASTER_STRUCTURE4 RASTER_STRUCTURE3 RASTER_STRUCTURE2 RASTER_STRUCTURE2 RASTER_STRUCTURE2 RANC_TYPE5 ANC_TYPE5 ANC_TYPE4 ANC_TYPE4 ANC_TYPE2 ANC_TYPE2 ANC_TYPE2 ANC_TYPE2 ANC_TYPE3 ANC_TYPE3 REA REA REA REA REA REA REA REA REA REA

5
2
Z
Ш
Ű

2.6.1 Host Interface Map (R/W registers)

REGISTER NAME	ADDRESS	15	14	13	12	11	10		œ	7	9	5	4	co S	2		0
ERROR_MASK	1Ah						VD_STD_ ERR_MASK	FF_CRC_ ERR_MASK	AP_CRC_ ERR_MASK	LOCK_ ERR_MASK	Not Used	CS_ERR_ MASK	Not Used	Not Used	Not Used	SAV_ERR_ MASK	EAV_ERR_ MASK
FF_LINE_END_F1	19h							69	b8	b7	9q	b5	b4	b3	b2	b1	09
FF_LINE_START_F1	18h							69	b8	b7	b6	b5	b4	b3	b2	b1	09
FF_LINE_END_F0	17h							69	b8	p7	9Q	b5	b4	b3	b2	b1	0q
FF_LINE_START_F0	16h							69	b8	b7	p6	b5	b4	b3	b2	b1	09
AP_LINE_END_F1	15h							69	b8	b7	p6	b5	b4	b3	b2	b1	09
AP_LINE_START_F1	14h							69	b8	b7	p6	b5	b4	b3	b2	b1	09
AP_LINE_END_F0	13h							69	b8	b7	9q	b5	b4	p3	b2	b1	09
AP_LINE_START_F0	12h							6q	b8	b7	b6	b5	b4	b3	b2	b1	0q
	11h																
	10h																
	OFh																
	OEh																
	0Dh																
	0Ch																
	OBh																
	0Ah																
ANC_TYPE5	460	b15	b14	b13	b12	b11	b10	6q	b8	b7	9q	b5	b4	b3	b2	b1	09
ANC_TYPE4	08h	b15	b14	b13	b12	b11	b10	69	b8	b7	9q	b5	b4	b3	b2	b1	09
ANC_TYPE3	420	b15	b14	b13	b12	b11	b10	69	b8	b7	p6	b5	b4	b3	b2	b1	09
ANC_TYPE2	06h	b15	b14	b13	b12	b11	b10	69	b8	b7	p6	b5	b4	b3	b2	b1	09
ANC_TYPE1	05h	b15	b14	b13	b12	b11	b10	6q	b8	b7	9q	b5	b4	b3	b2	b1	09
	04h																
	03h																
	02h																
	01h																
IOPROC_DISABLE	400								H_CONFIG			ILLEGAL_	EDH_CRC_ INS	ANC_CSUM_ INS			TRS_INS

22208 - 8 January 2007

GENNUM

GS9060 Data Sheet

GENNUM

2.6.2 Host Interface Map (Read only registers)

REGISTER NAME	ADDRESS	15	14	13	12	1	10	6	80	7	9	5	4	3	2		0
	1Ah																
	19h																
	18h																
	17h																
	16h																
	15h																
	14h																
	13h																
	12h																
RASTER_STRUCTURE4	11h						b10	6q	b8	b7	b6	b5	b4	b3	b2	p1	p0
RASTER_STRUCTURE3	10h						b10	6q	b8	b7	b6	b5	b4	b3	b2	b1	p0
RASTER_STRUCTURE2	0Fh					b11	b10	6q	b8	b7	b6	b5	b4	b3	b2	b1	p0
RASTER_STRUCTURE1	OEh					b11	b10	6q	b8	b7	b6	b5	b4	b3	b2	b1	p0
VIDE0_FORMAT_OUT_B	ODh	VFO4-b7	VFO4-b6	VF04-b5	VFO4-b4	VFO4-b3	VFO4-b2	VFO4-b1	VFO4-b0	VF03-b7	VFO3-b6	VFO3-b5	VFO3-b4	VF03-b3	VFO3-b2	VFO3-b1	VFO3-b0
VIDE0_FORMAT_OUT_A	0Ch	VFO2-b7	VFO2-b6	VF02-b5	VFO2-b4	VFO2-b3	VFO2-b2	VFO2-b1	VFO2-b0	VF01-b7	VFO1-b6	VFO1-b5	VFO1-b4	VFO1-b3	VFO1-b2	VFO1-b1	VFO1-b0
	0Bh																
	0Ah																
	460																
	08h																
	07h																
	06h																
	05h																
VIDE0_STANDARD	04h		VDS-b4	VDS-b3	VDS-b2	VDS-b1	VDS-b0	INT_PROG	STD_LOCK					DF-b3	DF-b2	DF-b1	DF-b0
EDH_FLAG	03h		ANC-UES	ANC-IDA	ANC-IDH	ANC-EDA	ANC-EDH	FF-UES	FF-IDA	FF-IDH	FF-EDA	FF-EDH	AP-UES	AP-IDA	AP-IDH	AP-EDA	AP-EDH
	02h																
ERROR_STATUS	01h						VD_STD_ERR	FF_CRC_ERR	VD_STD_ERR FF_CRC_ERR AP_CRC_ERR LOCK_ERR	LOCK_ERR		CS_ERR				SAV_ERR	EAV_ERR
	400																

3. Detailed Description

3.1 Functional Overview

The GS9060 is a dual-standard reclocking deserializer with an integrated serial digital loop-through output. When used in conjunction with any Gennum cable equalizer and the external GO1555/GO1525* Voltage Controlled Oscillator, a receive solution at 270Mb/s is realized.

The application layer must set external device pins for the correct reception of either SMPTE or DVB-ASI data. The GS9060 also supports the reclocking and deserializing of data not conforming to SMPTE or DVB-ASI streams.

The provided serial loop-through outputs may be selected as either buffered or reclocked versions of the input signal and feature a high impedance mode, output mute on loss of signal and adjustable signal swing.

In the digital signal processing core, several data processing functions are implemented including error detection and correction and automatic video standards detection. These features are all enabled by default, but may be individually disabled via internal registers accessible through the GSPI host interface.

Finally, the GS9060 contains a JTAG interface for boundary scan test implementations.

*For new designs use GO1555

3.2 Serial Digital Input

The GS9060 contains two current mode differential serial digital input buffers, allowing the device to be connected to two SMPTE 259M-C compliant input signals.

Both input buffers have internal 50Ω termination resistors which are connected to ground via the TERM1 and TERM2 pins. The input common mode level is set by internal biasing resistors such that the serial digital input signals must be AC coupled into the device. Gennum recommends using a capacitor value of 4.7µF to accommodate pathological signals.

The input buffers use a separate power supply of +1.8V DC supplied via the BUFF_VDD and PDBUFF_GND pins.

3.2.1 Input Signal Selection

A 2x1 input multiplexer is provided to allow the application layer to select between the two serial digital input streams using a single external pin. When IP_SEL is set HIGH, serial digital input 1 (DDI1 / $\overline{DDI1}$) is selected as the input to the GS9060's reclocker stage. When IP_SEL is set LOW, serial digital input 2 (DDI2 / $\overline{DDI2}$) is selected.

3.2.2 Carrier Detect Input

For each of the differential inputs, an associated carrier detect input signal is included, ($\overline{CD1}$ and $\overline{CD2}$). These signals are generated by Gennum's family of automatic cable equalizers.

When LOW, CDx indicates that a valid serial digital data stream is being delivered to the GS9060 by the equalizer. When HIGH, the serial digital input to the device should be considered invalid. If no equalizer precedes the device, the application layer should set CD1 and CD2 accordingly.

NOTE: If the GS9064 Automatic Cable Equalizer is used, the MUTE/CD output signal from that device must be translated to TTL levels before passing to the GS9060 $\overline{\text{CDx}}$ inputs. See Section 4.1 on page 56 for a recommended transistor network that will set the correct voltage levels.

A 2x1 input multiplexer is also provided for these signals. The internal carrier_detect signal is determined by the setting of the IP_SEL pin and is used by the lock detect block of the GS9060 to determine the lock status of the device, Section 3.6 on page 28.

3.2.3 Single Input Configuration

If the application requires a single differential input, the second set of inputs may be left unconnected. Tie the associated carrier detect pin HIGH, and leave the termination pin unconnected.

3.3 Serial Digital Reclocker

The output of the 2x1 serial digital input multiplexer passes to the GS9060's internal reclocker stage. The function of this block is to lock to the input data stream, extract a clean clock, and retime the serial digital data to remove high frequency jitter.

The reclocker was designed with a 'hexabang' phase and frequency detector. That is, the PFD used can identify six 'degrees' of phase / frequency misalignment between the input data stream and the clock signal provided by the VCO, and correspondingly signal the charge pump to produce six different control voltages. This results in fast and accurate locking of the PLL to the data stream.

If lock is achieved, the reclocker provides an internal pll_lock signal to the lock detect block of the device.

3.3.1 External VCO

The GS9060 requires the external GO1555/GO1525* Voltage Controlled Oscillator as part of the reclocker's phase-locked loop. This external VCO implementation was chosen to ensure high quality reclocking.

Power for the external VCO is generated entirely by the GS9060 from an integrated voltage regulator. The internal regulator uses +3.3V DC supplied via the CP_VDD / CP_GND pins to provide +2.5V DC on the VCO_VCC / VCO_GND pins.

The control voltage to the VCO is output from the GS9060 on the LF pin and requires $4.7k\Omega$ pull-up and pull-down resistors to ensure correct operation.

The GO1555/GO1525* produces a reference signal for the reclocker, input on the VCO pin of the GS9060. Both LF and VCO signals should be referenced to the supplied VCO_GND as shown in the recommended application circuit of Section 4.1 on page 56.

*For new designs use GO1555

3.3.2 Loop Bandwidth

The loop bandwidth of the integrated reclocker is nominally 1.4MHz, but may be increased or decreased via the LB_CONT pin. It is recommended that this pin be connected to VCO_GND through $39.2k\Omega$ to maximize the input jitter tolerance of the device.

3.4 Serial Digital Loop-Through Output

The GS9060 contains an integrated current mode differential serial digital cable driver with automatic slew rate control. When enabled, this serial digital output provides an active loop-through of the input signal.

To enable the loop-through output, SDO_EN/DIS must be set HIGH by the application layer. Setting the SDO_EN/DIS signal LOW will cause the SDO and SDO output pins to become high impedance, resulting in reduced device power consumption.

With suitable external return loss matching circuitry, the GS9060's loop-through outputs will provide a minimum output return loss of -15dB at 270Mb/s.

The integrated cable driver uses a separate power supply of +1.8V DC supplied via the CD_VDD and CD_GND pins.

3.4.1 Output Swing

Nominally, the voltage swing of the serial digital loop-through output is $800mV_{p-p}$ single-ended into a 75Ω load. This is set externally by connecting the RSET pin to CD_VDD through 281Ω .

The loop-through output swing may be decreased by increasing the value of the RSET resistor. The relationship is approximated by the curve shown in Figure 3-1.

Alternatively, the serial digital output can drive 800 mVp-p into a 50Ω load. Since the output swing is reduced by a factor of approximately one third when the smaller load is used, the RSET resistor must be 187Ω to obtain 800 mVp-p.

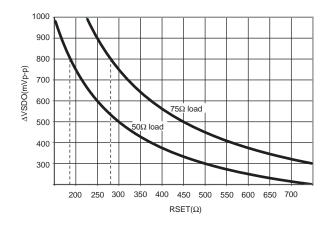


Figure 3-1: Serial Digital Loop-Through Output Swing

3.4.2 Reclocker Bypass Control

The serial digital loop-through output may be either a buffered version of the serial digital input signal, or a reclocked version of that signal.

The application layer may choose the reclocked output by setting \overline{RC}_{BYP} to logic HIGH. If \overline{RC}_{BYP} is set LOW, the data stream will bypass the internal reclocker and the serial digital output will be a buffered version of the input.

3.4.3 Serial Digital Output Mute

The GS9060 will automatically mute the serial digital loop-through output when the internal carrier_detect signal indicates an invalid serial input.

The loop-through output will also be muted when SDO/SDO is selected as reclocked, ($\overline{RC}_{BYP} = HIGH$), but the lock detect block has failed to lock to the data stream, (LOCKED = LOW).

 Table 3-1 summarizes the possible states of the serial digital loop-through output data stream.

Table 3-1: Serial	Digital	Loop-Through	Output S	Status
-------------------	---------	--------------	----------	--------

SDO	CD	Locked	RC_BYP
RECLOCKED	LOW	HIGH	HIGH
BUFFERED	LOW	Х	LOW
MUTED	LOW	LOW	HIGH
MUTED	HIGH	LOW*	Х

*NOTE: LOCKED = HIGH if and only if \overline{CD} = LOW

3.5 Serial-To-Parallel Conversion

The retimed data and phase-locked clock signals from the reclocker are fed to the serial-to-parallel converter. The function of this block is to extract 10-bit data words from the reclocked serial data stream and present them to the SMPTE and DVB-ASI word alignment blocks simultaneously.

3.6 Lock Detect

The lock detect block controls the centre frequency of the integrated reclocker to ensure lock to the received serial digital data stream is achieved, and indicates via the LOCKED output pin that the device has detected the appropriate sync words. In Data Through mode, the detection for appropriate sync words is turned off. The LOCKED pin is an indication of analog lock.

Lock detection is a continuous process, which begins at device power up or after a system reset, and continues until the device is powered down or held in reset.

The lock detection algorithm first determines if a valid serial digital input signal has been presented to the device by sampling the internal carrier_detect signal. As described in Section 3.2.2 on page 25, this signal will be LOW when a good serial digital input signal has been detected.

If the carrier_detect signal is HIGH, the serial data into the device is considered invalid, and the VCO frequency will be set to the centre of the pull range. The LOCKED pin will be LOW and all outputs of the device except for the PCLK output will be muted. Instead, the PCLK output frequency will operate within +/-3% of the rates shown in Table 3-15 of Section 3.11.5 on page 51.

NOTE: When the device is operating in DVB-ASI mode, the parallel outputs will not mute when the carrier_detect signal is HIGH. The LOCKED signal will function normally.

If a valid input signal has been detected the lock algorithm will enter a hunt phase where four attempts are made to detect the presence of either SMPTE TRS sync words or DVB-ASI sync words. The centre frequency of the reclocker will be 270Mb/s.

Assuming that a valid SMPTE or DVB-ASI signal has been applied to the device, asynchronous lock times will be as listed in AC Characteristics, Table 2-2.

NOTE: The PCLK output will continue to operate during the lock detection process. The frequency may toggle will be 27MHz when the 20bit/10bit pin is set LOW, and 13.5MHz when 20bit/10bit is set HIGH.

For SMPTE and DVB-ASI inputs, the lock detect block will only assert the LOCKED output signal HIGH if (1) the reclocker has locked to the input data stream as indicated by the internal pll_lock signal, and (2) TRS or DVB-ASI sync words have been correctly identified.

If after four attempts lock has not been achieved, the lock detection algorithm will enter into PLL lock mode. In this mode, the reclocker will attempt to lock to the input data stream without detecting SMPTE TRS or DVB-ASI sync words. This unassisted process can take up to 10ms to achieve lock.

When reclocker lock as indicated by the internal pll_lock signal is achieved in this mode, data will be passed directly to the parallel outputs without any further processing taking place and the LOCKED signal will be asserted HIGH if and only if the SMPTE_BYPASS and DVB_ASI input pins are set LOW.

3.6.1 Input Control Signals

The GS9060 contains three input control signals which determine how the device locks to the input.

It is required that the application layer set the SMPTE_BYPASS and DVB_ASI inputs to reflect the appropriate input data format. If either is configured incorrectly, the device will not lock to the input data stream, and the DATA_ERROR pin will be set LOW.

The third input signal, RC_BYP, allows the application layer to determine whether the serial digital loop-through output will be a reclocked or buffered version of the input, Section 3.4.2 on page 27. Table 3-2 shows the required settings for various input formats.

Format	Pin Sett	ings
	SMPTE_BYPASS	DVB_ASI
SD SMPTE	HIGH	LOW
DVB-ASI	LOW	HIGH
NOT SMPTE OR DVB-ASI*	LOW	LOW

Table 3-2: Input Control Signals

*NOTE: See Section 3.9 on page 36 for a complete description of Data-Through mode.

3.7 SMPTE Functionality

The GS9060 is said to be in SMPTE mode once the device has detected SMPTE TRS sync words and locked to the input data stream as described in Section 3.6 on page 28. The device will remain in SMPTE mode until such time that SMPTE TRS sync words fail to be detected.

The lock detect block may also drop out of SMPTE mode under the following conditions:

- RESET_TRST is asserted LOW
- CDx is HIGH
- SMPTE_BYPASS is asserted LOW
- DVB_ASI is asserted HIGH

TRS word detection is a continuous process and both 8-bit and 10-bit TRS words will be identified by the device.

The application layer must assert the DVB_ASI pin LOW and the SMPTE_BYPASS pin HIGH in order to enable SMPTE operation.

3.7.1 SMPTE Descrambling and Word Alignment

After serial-to-parallel conversion, the internal 10-bit data bus is fed to the SMPTE descramble and word alignment block. The function of this block is to carry out NRZI-to-NRZ decoding, descrambling according to SMPTE 259M, and word alignment of the data to the TRS sync words.

Word alignment occurs when two consecutive valid TRS words (SAV and EAV inclusive) with the same bit alignment have been detected.

In normal operation, re-synchronization of the word alignment process will only take place when two consecutive identical TRS word positions have been detected. When automatic or manual switch line lock handling is 'actioned', Section 3.7.3 on page 31, word alignment re-synchronization will occur on the next received TRS code word.

3.7.2 Internal Flywheel

The GS9060 has an internal flywheel which is used in the generation of internal / external timing signals, in the detection and correction of certain error conditions and in automatic video standards detection. It is only operational in SMPTE mode.

The flywheel consists of a number of counters and comparators operating at video pixel and video line rates. These counters maintain information about the total line length, active line length, total number of lines per field / frame, and total active lines per field / frame for the received video stream.

The flywheel 'learns' the video standard by timing the horizontal and vertical reference information contained in the TRS ID words of the received video stream. Full synchronization of the flywheel to the received video standard therefore requires one complete video frame.

Once synchronization has been achieved, the flywheel will continue to monitor the received TRS timing information to maintain synchronization.

The FW_EN/DIS input pin controls the synchronization mechanism of the flywheel. When this input signal is LOW, the flywheel will re-synchronize all pixel and line based counters on every received TRS ID word.

When FW_EN/DIS is held HIGH, re-synchronization of the pixel and line based counters will only take place when a consistent synchronization error has been detected. Two consecutive video lines with identical TRS timing different to the current flywheel timing must occur to initiate re-synchronization of the counters. This provides a measure of noise immunity to internal and external timing signal generation.

The flywheel will be disabled should the LOCKED signal or the RESET_TRST signal be LOW. A LOW to HIGH transition on either signal will cause the flywheel to re-acquire synchronization on the next received TRS word, regardless of the setting of the FW_EN/DIS pin.


3.7.3 Switch Line Lock Handling

The principal of switch line lock handling is that the switching of synchronous video sources will only disturb the horizontal timing and alignment of the stream, whereas the vertical timing remains in synchronization.

To account for the horizontal disturbance caused by a synchronous switch, it is necessary to re-synchronize the flywheel immediately after the switch has taken place. Rapid re-synchronization of the GS9060 to the new video standard can be achieved by controlling the flywheel using the FW_EN/DIS pin.

At every PCLK cycle the device samples the FW_EN/DIS pin. When a logic LOW to HIGH transition at this pin is detected anywhere within the active line, the flywheel will re-synchronize immediately to the next TRS word. This is shown in Figure 3-2.

To ensure switch line lock handling, the FW_EN/DIS signal should be LOW for a minimum of one PCLK cycle (maximum one video line) anywhere within the active portion of the line on which the switch has taken place.

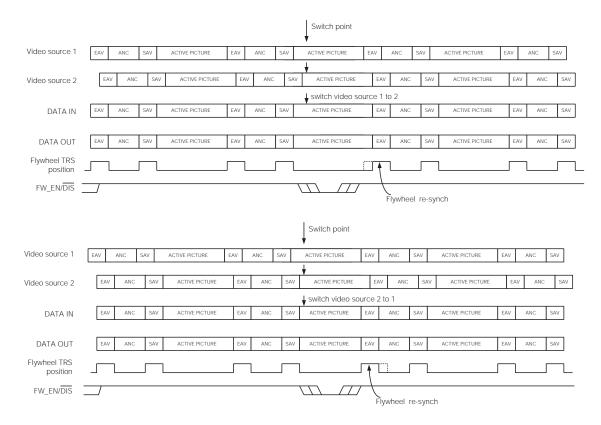



The ability to manually re-synchronize the flywheel is also important when switching asynchronous sources or to implement other non-standardized video switching functions.

The GS9060 also implements automatic switch line lock handling. By utilizing the synchronous switch points defined by SMPTE RP168 for all major video standards with the automatic video standards detect function, the device automatically re-synchronizes the flywheel at the switch point.

This function will occur regardless of the setting of the FW_EN/DIS pin.

The switch line is defined as follows:

- For 525 line interlaced systems: re-sync takes place at the end of lines 10 & 273.
- For 525 line progressive systems: re-sync takes place at the end of line 10.
- For 625 line interlaced systems: re-sync takes place at the end of lines 6 & 319.
- For 625 line progressive systems: re-sync takes place at the end of line 6.

A full list of all major video standards and switching lines is shown in Table 3-3.

NOTE: The flywheel timing will define the line count such that the line numbers shown in Table 3-3 may not correspond directly to the digital line counts.

Table 3-3: Switch Line Position for Digital Systems

System	Video Format	Sampling	Signal Standard	Parallel Interface	Serial Interface	Switch Line No.
SDTI	720x576/50 (2:1)	4:2:2	BT.656	BT.656 + 305M	259M	6, 319
	720x483/59.94 (2:1)	4:2:2	125M	125M + 305M	259M	10, 273
525	960x483/59.94 (2:1)	4:2:2	267M	267M	259M	10, 273
	720x483/59.94 (2:1)	4:4:4:4	267M	347M	344M	10, 273
	720x483/59.94 (2:1)	4:4:4:4	267M	RP174	344M	10, 273
	720x483/59.94 (2:1)	4:4:4:4	267M	RP175	RP175	10, 273
	720x483/59.94 (2:1)	4:2:2	125M	125M	259M	10, 273
	720x483/59.94 (1:1)	4:2:2	293M	347M	344M	10
	720x483/59.94 (1:1)	4:2:2	293M	293M	294M	10
	720x483/59.94 (1:1)	4:2:0	293M	293M	294M	10
625	720x576/50 (1:1)	4:2:2	BT.1358	347M	344M	6
	720x576/50 (1:1)	4:2:2	BT.1358	BT.1358	BT.1362	6
	720x576/50 (1:1)	4:2:0	BT.1358	BT.1358	BT.1362	6
	960x576/50 (2:1)	4:2:2	BT.601	BT.656	259M	6, 319
	720x576/50 (2:1)	4:4:4:4	BT.799	347M	344M	6, 319
	720x576/50 (2:1)	4:4:4:4	BT.799	BT.799	344M	6, 319
	720x576/50 (2:1)	4:4:4:4	BT.799	BT.799	_	6, 319
	720x576/50 (2:1)	4:2:2	BT.601	125M	259M	6, 319

3.7.4 HVF Timing Signal Generation

The GS9060 extracts critical timing parameters from either the received TRS signals ($FW_EN/\overline{DIS} = LOW$), or from the internal flywheel-timing generator ($FW_EN/\overline{DIS} = HIGH$).


Horizontal blanking period (H), vertical blanking period (V), and even / odd field (F) timing are all extracted and presented to the application layer via the H:V:F status output pins.

The H signal timing is configurable via the H_CONFIG bit of the internal IOPROC_DISABLE register as either active line based blanking, or TRS based blanking, Section 3.10.6 on page 46.

Active line based blanking is enabled when the H_CONFIG bit is set LOW. In this mode, the H output is HIGH for the entire horizontal blanking period, including the EAV and SAV TRS words. This is the default H timing used by the device.

When H_CONFIG is set HIGH, TRS based blanking is enabled. In this case, the H output will be HIGH for the entire horizontal blanking period as indicated by the H bit in the received TRS ID words.

The timing of these signals is shown in Figure 3-3.

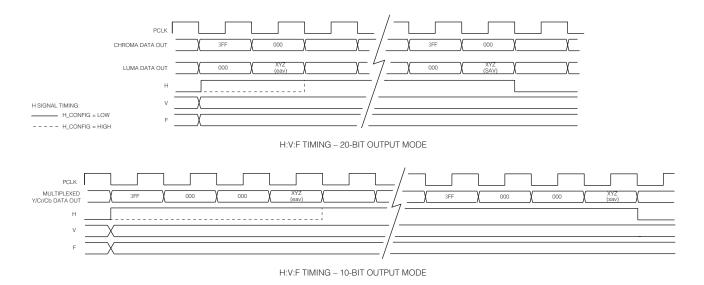



3.8 DVB-ASI Functionality

The GS9060 conforms to DVB-ASI standard EN 50083-9:1998.

The GS9060 is said to be in DVB-ASI mode once the device has detected 32 consecutive DVB-ASI words without a single word or disparity error being generated. The device will remain in DVB-ASI mode until 32 consecutive DVB-ASI word or disparity errors are detected, or until SMPTE TRS ID words have been detected.

The lock detect block may also drop out of DVB-ASI mode under the following conditions:

- RESET_TRST is asserted LOW
- CDx is HIGH
- SMPTE_BYPASS is asserted HIGH
- DVB_ASI is asserted LOW

K28.5 sync patterns in the received DVB-ASI data stream will be detected by the device in either inverted or non-inverted form.

The application layer must set <u>SMPTE_BYPASS</u> LOW and DVB_ASI HIGH in order to enable DVB-ASI operation.

3.8.1 Transport Packet Format

Transport packet structure shall conform to the specifications of EN/ISO/IEC 13818-1 and ETS 300 429 for Transport Stream Packets. The packet length can be 188 or 204 bytes.

3.8.2 DVB-ASI 8b/10b Decoding and Word Alignment

After serial-to-parallel conversion, the internal 10-bit data bus is fed to the DVB-ASI 8b/10b decode and word alignment block. The function of this block is to word align the data to the K28.5 sync characters, and 8b/10b decode and bit-swap the data to achieve bit alignment with the data outputs.

The extracted 8-bit data will be presented to DOUT[17:10], bypassing all internal SMPTE mode data processing.

NOTE: When operating in DVB-ASI mode, DOUT[9:0] are forced LOW.

3.8.3 Status Signal Outputs

In DVB-ASI mode, the DOUT19 and DOUT18 pins will be configured as DVB-ASI status signals SYNCOUT and WORDERR respectively.

SYNCOUT will be HIGH whenever a K28.5 sync character is present on the output. This output may be used to drive the write enable signal of an external FIFO, thus providing a means of removing the K28.5 sync characters from the data stream. Parallel DVB-ASI data may then be clocked out of the FIFO at some rate less than 27MHz. See Figure 3-4.

WORDERR will be high whenever the device has detected an illegal code word.

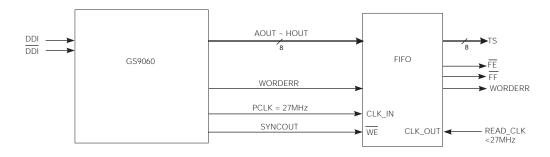


Figure 3-4: DVB-ASI FIFO Implementation using the GS9060

3.9 Data Through Mode

The GS9060 may be configured by the application layer to operate as a simple serial-to-parallel converter. In this mode, the device presents data to the output data bus without performing any decoding, descrambling or word-alignment.

Data through mode is enabled only when the SMPTE_BYPASS and DVB_ASI input pins are set LOW. Under these conditions, the lock detection algorithm enters PLL lock mode, Section 3.6 on page 28, such that the device may reclock data not conforming to SMPTE or DVB-ASI streams. The LOCKED pin will indicated analog lock.

3.10 Additional Processing Functions

The GS9060 contains an additional data processing block which is available in SMPTE mode only, Section 3.7 on page 30.

3.10.1 FIFO Load Pulse

To aid in the application-specific implementation of auto-phasing and line synchronization functions, the GS9060 will generate a FIFO load pulse to reset line-based FIFO storage.

The FIFO_LD output pin will normally be HIGH but will go LOW for one PCLK period, thereby generating a FIFO write reset signal.

The FIFO load pulse will be generated such that it is co-timed to the SAV XYZ code word presented to the output data bus. This ensures that the next PCLK cycle will correspond to the first active sample of the video line.

Figure 3-5 shows the timing relationship between the FIFO_LD signal and the output video data.

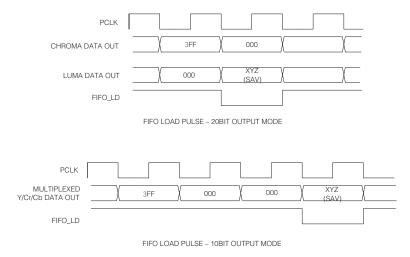


Figure 3-5: FIFO_LD Pulse Timing


3.10.2 Ancillary Data Detection and Indication

The GS9060 will detect all types of ancillary data in either the vertical or horizontal blanking spaces and indicate via the status signal output pins YANC and CANC the position of ancillary data in the output data stream. These status signal outputs are synchronous with PCLK and can be used as clock enables to external logic, or as write enables to an external FIFO or other memory device.

The YANC and CANC signal operation will depend on the output data format. For 20-bit demultiplexed data, Section 3.11 on page 49, the YANC and CANC signals will operate independently. However, for 10-bit multiplexed data, the YANC and CANC signals will both be HIGH whenever ancillary data is detected.

The signals will be HIGH from the start of the ancillary data preamble and will remain HIGH until after the ancillary data checksum.

The operation of the YANC and CANC signals is shown in Figure 3-6.

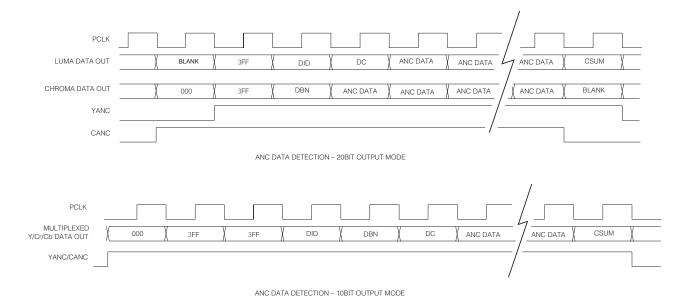



3.10.2.1 Programmable Ancillary Data Detection

Although the GS9060 will detect all types of ancillary data by default, it also allows the host interface to specifically program up to five different ancillary data types for detection. This is accomplished via the ANC_TYPE register (Table 3-4).

For each data type to be detected, the host interface must program the DID and/or SDID of the ancillary data type of interest. The GS9060 will compare the received DID and/or SDID with the programmed values and assert YANC and CANC only if an exact match is found.

If any DID or SDID value is set to zero in the ANC_TYPE register, no comparison or match will be made for that value. For example, if the DID is programmed but

the SDID is set to zero, the device will detect all ancillary data types matching the DID value, regardless of the SDID.

In the case where all five DID and SDID values are set to zero, the GS9060 will detect all ancillary data types. This is the default setting after device reset.

Where one or more, but less than five, DID and/or SDID values have been programmed, then only those matching ancillary data types will be detected and indicated.

NOTE 1: The GS9060 will always detect EDH ancillary data packets for EDH error detection purposes, regardless of which DID/SDID values have been programmed for ancillary data indication, Section 3.10.5.2 on page 44.

NOTE 2: See SMPTE 291M for a definition of ancillary data terms.

Register Name	Bit	Name	Description	R/W	Default
ANC_TYPE1 Address: 05h	15-8	ANC_TYPE1[15:8]	Used to program the DID for ancillary data detection at the YANC and CANC output	R/W	0
	7-0	ANC_TYPE1[7:0]	Used to program the SDID for ancillary data detection at the YANC and CANC output.	R/W	0
			Should be set to zero if no SDID is present in the ancillary data packet to be detected.		
ANC_TYPE2 Address: 06h	15-8	ANC_TYPE2[15:8]	Used to program the DID for ancillary data detection at the YANC and CANC output	R/W	0
	7-0	ANC_TYPE2[7:0]	Used to program the SDID for ancillary data detection at the YANC and CANC output.	R/W	0
			Should be set to zero if no SDID is present in the ancillary data packet to be detected.		
ANC_TYPE3 Address: 07h	15-8	ANC_TYPE3[15:8]	Used to program the DID for ancillary data detection at the YANC and CANC output	R/W	0
	7-0	ANC_TYPE3[7:0]	Used to program the SDID for ancillary data detection at the YANC and CANC output.	R/W	0
			Should be set to zero if no SDID is present in the ancillary data packet to be detected.		
ANC_TYPE4 Address: 08h	15-8	ANC_TYPE4[15:8]	Used to program the DID for ancillary data detection at the YANC and CANC output	R/W	0
	7-0	ANC_TYPE4[7:0]	Used to program the SDID for ancillary data detection at the YANC and CANC output.	R/W	0
			Should be set to zero if no SDID is present in the ancillary data packet to be detected.		
ANC_TYPE5 Address: 09h	15-8	ANC_TYPE5[15:8]	Used to program the DID for ancillary data detection at the YANC and CANC output	R/W	0
	7-0	ANC_TYPE5[7:0]	Used to program the SDID for ancillary data detection at the YANC and CANC output.	R/W	0
			Should be set to zero if no SDID is present in the ancillary data packet to be detected.		

Table 3-4: Host Interface Description for Programmable Ancillary Data Type Registers

3.10.3 SMPTE 352M Payload Identifier

The GS9060 can receive and detect the presence of the SMPTE 352M payload identifier ancillary data packet. This four word payload identifier packet may be used to indicate the transport mechanism, frame rate and line scanning / sampling structure.

Upon reception of this packet, the device will extract the four words describing the video format being transported and make this information available to the host interface via the four VIDEO_FORMAT_OUT registers (Table 3-5).

The VIDEO_FORMAT_OUT registers will only be updated if the received checksum is the same as the locally calculated checksum.

These registers will be cleared to zero, indicating an undefined format, if the device loses lock to the input data stream (LOCKED = LOW), or if the SMPTE_BYPASS pin is asserted LOW. This is also the default setting after device reset.

The SMPTE 352M packet should be received once per field for interlaced systems and once per frame for progressive systems. If the packet is not received for two complete video frames, the VIDEO_FORMAT_OUT registers will be cleared to zero.

Register Name	Bit	Name	Description	R/W	Default
VIDEO_FORMAT_OUT_B Address: 0Dh	15-8	SMPTE352M Byte 4	Data will be available in this register when Video Payload Identification Packets are detected in the data stream.	R	0
	7-0	SMPTE352M Byte 3	Data will be available in this register when Video Payload Identification Packets are detected in the data stream.	R	0
VIDEO_FORMAT_OUT_A Address: 0Ch	15-8	SMPTE352M Byte 2	Data will be available in this register when Video Payload Identification Packets are detected in the data stream.	R	0
	7-0	SMPTE352M Byte 1	Data will be available in this register when Video Payload Identification Packets are detected in the data stream.	R	0

Table 3-5: Host Interface Description for SMPTE 352M Payload Identifier Registers

3.10.4 Automatic Video Standard and Data Format Detection

The GS9060 can independently detect the input video standard and data format by using the timing parameters extracted from the received TRS ID words. This information is presented to the host interface via the VIDEO_STANDARD register (Table 3-6).

Total samples per line, active samples per line, total lines per field/frame and active lines per field/frame are also calculated and presented to the host interface via the RASTER_STRUCTURE registers (Table 3-7). These line and sample count registers are updated once per frame at the end of line 12. This is in addition to the information contained in the VIDEO_STANDARD register.

After device reset, the four RASTER_STRUCTURE registers default to zero.

3.10.4.1 Video Standard Indication

The video standard codes reported in the VD_STD[4:0] bits of the VIDEO_STANDARD register represent the SMPTE standards as shown in Table 3-8.

In addition to the 5-bit video standard code word, the VIDEO_STANDARD register also contains an additional status bit. The STD_LOCK bit will be set HIGH whenever the flywheel has achieved full synchronization.

The VD_STD[4:0] and STD_LOCK bits of the VIDEO_STANDARD register will default to zero after device reset. The VD_STD[4:0] bits will also default to zero if the device loses lock to the input data stream, (LOCKED = LOW), or if the SMPTE_BYPASS pin is asserted LOW. The STD_LOCK bit will retain its previous value if the input is removed.

Table 3-6: Host Interface Description for Video Standard and Data Format Register

Register Name	Bit	Name	Description	R/W	Default
VIDEO_STANDARD	15	Not Used			
Address: 04h	14-10	VD_STD[4:0]	Video Data Standard (see Table 3-8)	R	0
	9	Not Used			
	8	STD_LOCK	Standard Lock: Set HIGH when flywheel has achieved full synchronization.	R	0
	7-4	Not Used			
	3-0	DATA_FORMAT[3:0]	Data Format (see Table 3-9).	R	F _h

Table 3-7: Host Interface Description for Raster Structure Registers

Register Name	Bit	Name	Description	R/W	Default
RASTER_STRUCTURE1 Address: 0Eh	15-12	Not Used			
	11-0	RASTER_STRUCTURE1[11:0]	Words Per Active Line.	R	0
RASTER_STRUCTURE2 Address: 0Fh	15-12	Not Used			
	11-0	RASTER_STRUCTURE2[11:0]	Words Per Total Line.	R	0
RASTER_STRUCTURE3	15-11	Not Used			
Address: 10h	10-0	RASTER_STRUCTURE3[10:0]	Total Lines Per Frame.	R	0
RASTER_STRUCTURE4	15-11	Not Used			
	10-0	RASTER_STRUCTURE4[10:0]	Active Lines Per Field.	R	0

VD_STD[4:0]	SMPTE Standard	Video Format	Length Of HANC	Length Of Active Video	Total Samples	SMPTE352M Lines
16h	125M	1440x487/60 (2:1) (Or dual link progressive)	268	1440	1716	13, 276
17h	125M	1440x507/60 (2:1)	268	1440	1716	13, 276
19h	125M	525-line 487 generic	-	_	1716	13, 276
1Bh	125M	525-line 507 generic	-	_	1716	13, 276
18h	ITU-R BT.656	1440x576/50 (2:1) (Or dual link progressive)	280	1440	1728	9, 322
1Ah	ITU-R BT.656	625-line generic (EM)	-	-	1728	9, 322
1Eh	Unknown SD	-	-	-	-	_
00h-15h, 1Ch, 1Fh	Reserved					

Table 3-8: Supported Video Standards

3.10.4.2 Data Format Indication

The data format codes will be reported in the DATA_FORMAT[3:0] bits of the VIDEO_STANDARD register. These codes represent the data formats listed in Table 3-9.

The DATA_FORMAT[3:0] bits of the VIDEO_STANDARD register will default to F_h' after device reset. These bits will also default to F_h' if the device loses lock to the input data stream, (LOCKED = LOW), or if Data-Through mode is enabled, Section 3.9 on page 36.

Table 3-9: Data Format Codes

Data_Format[3:0]	Data Format	Applicable Standards
0h	SDTI DVCPRO - No ECC	SMPTE 321M
1h	SDTI DVCPRO - ECC	SMPTE 321M
2h	SDTI DVCAM	SMPTE 322M
3h	SDTI CP	SMPTE 326M
4h	Other SDTI fixed block size	-
5h	Other SDTI variable block size	-
6h	SDI	-
7h	DVB-ASI	-
8h ~ Eh	Reserved	
Fh	Unknown data format	-

3.10.5 Error Detection and Indication

The GS9060 contains a number of error detection functions to enhance operation of the device when operating in SMPTE mode. These functions, (except lock error detection), will not be available in either DVB-ASI or Data-Through operating modes. See Section 3.8 on page 34 and Section 3.9 on page 36.

The device maintains an error status register at address 01_h called ERROR_STATUS (Table 3-10). Each type of error has a specific flag or bit in this register which is set HIGH whenever that error is detected.

The ERROR_STATUS register will be cleared at the start of each video field or when read by the host interface, which ever condition occurs first.

All bits of the ERROR_STATUS register except the LOCK_ERR bit will also be cleared if a change in the video standard is detected, or under the following conditions:

- RESET_TRST is held LOW
- LOCKED is asserted LOW
- SMPTE_BYPASS is asserted LOW

In addition to the ERROR_STATUS register, a register called ERROR_MASK (Table 3-11) is included which allows the host interface to select the specific error conditions that will be detected. There is one bit in the ERROR_MASK register for each type of error represented in the ERROR_STATUS register.

The bits of the ERROR_MASK register will default to '0' after device reset, thus enabling all error types to be detected. The host interface may disable individual error detection by setting the corresponding bit HIGH in this register.

Error conditions are also indicated to the application layer via the status signal pin DATA_ERROR. This output pin is a logical 'OR'ing of each error status flag stored in the ERROR_STATUS register. DATA_ERROR is normally HIGH, but will be set LOW by the device when an error condition that has not been masked is detected.

Register Name	Bit	Name	Description	R/W	Default
ERROR_STATUS	15-11	Not Used			
Address: 01h	10	VD_STD_ERR	Video Standard Error Flag. Set HIGH when a mismatch between the received SMPTE352M packets and the calculated video standard occurs.	R	0
	9	FF_CRC_ERR	Full Field CRC Error Flag. Set HIGH in SD mode when a Full Field (FF) CRC mismatch has been detected in Field 1 or 2.	R	0
	8	AP_CRC_ERR	Active Picture CRC Error Flag. Set HIGH in SD mode when an Active Picture (AP) CRC mismatch has been detected in Field 1 or 2.	R	0
	7	LOCK_ERR	Lock Error Flag. Set HIGH whenever the LOCK pin is LOW (indicating the device not correctly locked).	R	0
	6	Not Used			
	5	CS_ERR	Luma Checksum Error Flag. Set HIGH when ancillary data packet checksum error has been detected in the Y channel.	R	0
	4-2	Not Used			
	1	SAV_ERR	Start of Active Video Error Flag. Set HIGH when TRS errors are detected in either 8-bit or 10-bit TRS words. FW_EN/DIS must be set HIGH.	R	0
	0	EAV_ERR	End of Active Video Error Flag. Set HIGH when TRS errors are detected in either 8-bit or 10-bit TRS words. FW_EN/DIS must be set HIGH.	R	0

Table 3-10: Host Interface Description for Error Status Register

Table 3-11: Host Interface Description for Error Mask Register

Register Name	Bit	Name	Description	R/W	Default
ERROR_MASK Address: 1Ah	15-11	Not Used			
	10	VD_STD_ERR_MASK	Video Standard Error Flag Mask bit.	R/W	0
	9	FF_CRC_ERR_MASK	Full Field CRC Error Flag Mask bit.	R/W	0
	8	AP_CRC_ERR_MASK	Active Picture CRC Error Flag Mask bit.	R/W	0
	7	LOCK_ERR_MASK	Lock Error Flag Mask bit.	R/W	0
	6	Not Used			
	5	CS_ERR_MASK	Checksum Error Flag Mask bit.	R/W	0
	4-2	Not Used			
	1	SAV_ERR_MASK	Start of Active Video Error Flag Mask bit.	R/W	0
	0	EAV_ERR_MASK	End of Active Video Error Flag Mask bit.	R/W	0

3.10.5.1 Video Standard Error Detection

If a mismatch between the received SMPTE 352M packets and the calculated video standard occurs, the GS9060 will indicate a video standard error by setting the VD_STD_ERR bit of the ERROR_STATUS register HIGH.

3.10.5.2 EDH CRC Error Detection

The GS9060 calculates Full Field (FF) and Active Picture (AP) CRC words according to SMPTE RP165 in support of Error Detection and Handling packets in SD signals.

These calculated CRC values are compared with the received CRC values. If a mismatch is detected, the error is flagged in the AP_CRC_ERR and/or FF_CRC_ERR bits of the ERROR_STATUS register. These two flags are shared between fields 1 and 2.

The AP_CRC_ERR bit will be set HIGH when an active picture CRC mismatch has been detected in field 1 or 2. The FF_CRC_ERR bit will be set HIGH when a full field CRC mismatch has been detected in field 1 or 2.

EDH CRC errors will only be indicated when the device is operating in SMPTE mode, and when the device has correctly received EDH packets.

SMPTE RP165 specifies the calculation ranges and scope of EDH data for standard 525 and 625 component digital interfaces. The GS9060 will utilize these standard ranges by default.

If the received video format does not correspond to 525 or 625 digital component video standards as determined by the flywheel pixel and line counters, then one of two schemes for determining the EDH calculation ranges will be employed:

- 1. Ranges will be based on the line and pixel ranges programmed by the host interface; or
- 2. In the absence of user-programmed calculation ranges, ranges will be determined from the received TRS timing information.

The registers available to the host interface for programming EDH calculation ranges include active picture and full field line start and end positions for both fields. Table 3-12 shows the relevant registers, which default to '0' after device reset.

If any or all of these register values are zero, then the EDH CRC calculation ranges will be determined from the flywheel generated H signal. The first active and full field pixel will always be the first pixel after the SAV TRS code word. The last active and full field pixel will always be the last pixel before the start of the EAV TRS code words.

Register Name Bit		Name	Description	R/W	Default
AP_LINE_START_F0	15-10	Not Used			
Address: 12h	9-0	AP_LINE_START_F0[9:0]	Field 0 Active Picture start line data used to set EDH calculation range outside of SMPTE RP 165 values.	R/W	0
AP_LINE_END_F0	15-10	Not Used			
Address: 13h	9-0	AP_LINE_END_F0[9:0]	Field 0 Active Picture end line data used to set EDH calculation range outside of SMPTE RP 165 values.	R/W	0
AP_LINE_START_F1	15-10	Not Used			
Address: 14h	9-0	AP_LINE_START_F1[9:0]	Field 1 Active Picture end line data used to set EDH calculation range outside of SMPTE RP 165 values.	R/W	0
AP_LINE_END_F1 Address: 15h	15-10	Not Used			
	9-0	AP_LINE_END_F1[9:0]	Field 1 Active Picture end line data used to set EDH calculation range outside of SMPTE RP 165 values.	R/W	0
FF_LINE_START_F0	15-10	Not Used			
Address: 16h	9-0	FF_LINE_START_F0[9:0]	Field 0 Full Field start line data used to set EDH calculation range outside of SMPTE RP 165 values.	R/W	0
FF_LINE_END_F0	15-10	Not Used			
Address: 17h	9-0	FF_LINE_END_F0[9:0]	Field 0 Full Field start line data used to set EDH calculation range outside of SMPTE RP 165 values.	R/W	0
FF_LINE_START_F1	15-10	Not Used			
Address: 18h	9-0	FF_LINE_START_F1[9:0]	Field 1 Full Field start line data used to set EDH calculation range outside of SMPTE RP 165 values.	R/W	0
FF_LINE_END_F1	15-10	Not Used			
Address: 19h	9-0	FF_LINE_END_F1[9:0]	Field 1 Full Field end line data used to set EDH calculation range outside of SMPTE RP 165 values.	R/W	0

Table 3-12: Host Interface Description for EDH Calculation Range Registers

3.10.5.3 Lock Error Detection

The LOCKED pin of the GS9060 indicates the lock status of the reclocker and lock detect blocks of the device. Only when the LOCKED pin is asserted HIGH has the device correctly locked to the received data stream, Section 3.6 on page 28.

The GS9060 will also indicate lock error to the host interface when LOCKED = LOW by setting the LOCK_ERR bit in the ERROR_STATUS register HIGH.

3.10.5.4 Ancillary Data Checksum Error Detection

The GS9060 will calculate checksums for all received ancillary data and compare the calculated values to the received checksum words. If a mismatch is detected, the error is flagged in the CS_ERR bits of the ERROR_STATUS register.

Although the GS9060 will calculate and compare checksum values for all ancillary data types by default, the host interface may program the device to check only certain types of ancillary data checksums.

This is accomplished via the ANC_TYPE register as described in Section 3.10.2.1 on page 37.

3.10.5.5 TRS Error Detection

TRS errors flags are generated by the GS9060 when:

- The received TRS timing does not correspond to the internal flywheel timing; or
- 2. The received TRS hamming codes are incorrect.

Both 8-bit and 10-bit SAV and EAV TRS words are checked for timing and data integrity errors. These are flagged via the SAV_ERR and/or EAV_ERR bits of the ERROR_STATUS register.

Timing-based TRS errors will only be generated if the FW_EN/DIS pin is set HIGH.

3.10.6 Error Correction and Insertion

In addition to signal error detection and indication, the GS9060 may also correct certain types of errors by inserting corrected code words and checksums into the data stream. These features are only available in SMPTE mode and IOPROC_EN/DIS must be set HIGH. Individual correction features may be enabled or disabled via the IOPROC_DISABLE register (Table 3-13).

All of the IOPROC_DISABLE register bits default to '0' after device reset, enabling all of the processing features. To disable any individual error correction feature, the host interface must set the corresponding bit HIGH in the IOPROC_DISABLE register.

3.10.6.1 Illegal Code Remapping

If the ILLEGAL_REMAP bit of the IOPROC_DISABLE register is set LOW, the GS9060 will remap all codes within the active picture between the values of 3FCh and 3FFh to 3FBh. All codes within the active picture area between the values of 000h and 003h will be re-mapped to 004h.

In addition, 8-bit TRS and ancillary data preambles will be remapped to 10-bit values if this feature is enabled.

Register Name	Bit	Name	Description	R/W	Default
IOPROC_DISABLE Address: 00h	15-9	Not Used			
	8	H_CONFIG	Horizontal sync timing output configuration. Set LOW for active line blanking timing. Set HIGH for H blanking based on the H bit setting of the TRS words. See Figure 3-3.		0
	7	Not Used			
	6	Not Used			
	5	ILLEGAL_REMAP	Illegal Code re-mapping. Correction of illegal code words within the active picture. Set HIGH to disable. The IOPROC_EN/DIS pin must be set HIGH.	R/W	0
	4	EDH_CRC_INS	Error Detection & Handling (EDH) Cyclical Redundancy Check (CRC) error correction insertion. Set HIGH to disable. The IOPROC_EN/DIS pin must be set HIGH.	R/W	0
	3	ANC_CSUM_INS	Ancillary Data Check-sum insertion. Set HIGH to disable. The IOPROC_EN/DIS pin must be set HIGH.	R/W	0
	2-1	Not Used			
	0	TRS_INS	Timing Reference Signal Insertion. Set HIGH to disable. The IOPROC_EN/DIS pin must be set HIGH.	R/W	0

Table 3-13: Host Interface Description for Internal Processing Disable Register

3.10.6.2 EDH CRC Error Correction

The GS9060 will generate and insert active picture and full field CRC words into the EDH data packets received by the device. This feature is only available in SD mode and is enabled by setting the EDH_CRC_INS bit of the IOPROC_DISABLE register LOW.

EDH CRC calculation ranges are described in Section 3.10.5.2 on page 44.

NOTE: Although the GS9060 will modify and insert EDH CRC words and EDH packet checksums, EDH error flags will not be updated by the device.

3.10.6.3 Ancillary Data Checksum Error Correction

When ancillary data checksum error correction and insertion is enabled, the GS9060 will generate and insert ancillary data checksums for all ancillary data words by default. Where user specified ancillary data has been programmed into the device Section 3.10.2.1 on page 37, only the checksums for the programmed ancillary data types will be corrected.

This feature is enabled when the ANC_CSUM_INS bit of the IOPROC_DISABLE register is set LOW.

3.10.6.4 TRS Error Correction

When TRS error correction and insertion is enabled, the GS9060 will generate and insert 10-bit TRS code words as required.

TRS word generation will be performed in accordance with the timing parameters generated by the flywheel to provide an element of noise immunity. As a result, TRS correction will only take place if the flywheel is enabled, (FW_EN/DIS = HIGH).

In addition, the TRS_INS bit of the IOPROC_DISABLE register must be set LOW.

3.10.7 EDH Flag Detection

As described in Section 3.10.5.2 on page 44, the GS9060 can detect EDH packets in the received data stream. The EDH flags for ancillary data, active picture and full field areas are extracted from the detected EDH packets and placed in the EDH_FLAG register of the device (Table 3-14).

One set of flags is provided for both fields 1 and 2. Field 1 flag data will be overwritten by field 2 flag data.

The EDH_FLAG register may be read by the host interface at any time during the received frame except on the lines defined in SMPTE RP165 where these flags are updated.

NOTE 1: By programming the ANC_TYPE1 register (005h) with the DID word for EDH ancillary packets, the application layer may detect a high-to-low transition on either the YANC or CANC output pin of the GS9060 to determine (a) when EDH packets have been received by the device, and (b) when the EDH_FLAG register can be read by the host interface. See Section 3.10.2 on page 37 for more information on ancillary data detection and indication.

NOTE 2: The bits of the EDH_FLAG register are sticky and will not be cleared by a read operation. If the GS9060 is decoding a source containing EDH packets, where EDH flags may be set, and the source is replaced by one without EDH packets, the EDH_FLAG register will not be cleared.

NOTE 3: The GS9060 will detect EDH flags, but will not update the flags if an EDH CRC error is detected. Gennum's GS9062 Serializer allows the host to individually set EDH flags.

Register Name	Bit	Name	Description	R/W	Default
EDH_FLAG	15	Not Used			
Address: 03h	14	ANC-UES out	Ancillary Unknown Error Status Flag.	R	0
	13	ANC-IDA out	Ancillary Internal device error Detected Already Flag.	R	0
	12	ANC-IDH out	Ancillary Internal device error Detected Here Flag.	R	0
	11	ANC-EDA out	Ancillary Error Detected Already Flag.	R	0
	10	ANC-EDH out	Ancillary Error Detected Here Flag.	R	0
	9	FF-UES out	Full Field Unknown Error Status Flag.	R	0
	8	FF-IDA out	Full Field Internal device error Detected Already Flag.	R	0
	7	FF-IDH out	Full Field Internal device error Detected Here Flag.	R	0
	6	FF-EDA out	Full Field Error Detected Already Flag.	R	0
	5	FF-EDH out	Full Field Error Detected Here Flag.	R	0
	4	AP-UES out	Active Picture Unknown Error Status Flag.	R	0
	3	AP-IDA out	Active Picture Internal device error Detected Already Flag.	R	0
	2	AP-IDH out	Active Picture Internal device error Detected Here Flag.	R	0
	1	AP-EDA out	Active Picture Error Detected Already Flag.	R	0
	0	AP-EDH out	Active Picture Error Detected Here Flag.	R	0

Table 3-14: Host Interface Description for EDH Flag Register

3.11 Parallel Data Outputs

Data outputs leave the device on the rising edge of PCLK as shown in Figure 3-7.

The data may be scrambled or unscrambled, framed or unframed, and may be presented in 10-bit or 20-bit format. The output data bus width is controlled independently from the internal data bus width by the 20bit/10bit input pin.

Likewise, the output data format is defined by the setting of the external SMPTE_BYPASS and DVB_ASI pins. Recall that these pins are set by the application layer as inputs to the device.

3.11.1 Parallel Data Bus Buffers

The parallel data outputs of the GS9060 are driven by high-impedance buffers which support both LVTTL and LVCMOS levels. These buffers use a separate power supply of +3.3V DC supplied via the IO_VDD and IO_GND pins.

All output buffers, including the PCLK output, may be driven to a high-impedance state if the RESET_TRST signal is asserted LOW.

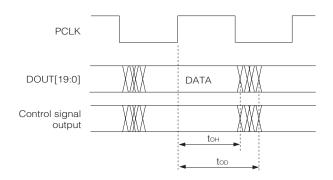


Figure 3-7: PCLK to Data Timing

3.11.2 Parallel Output in SMPTE Mode

When the device is operating in SMPTE mode, Section 3.7 on page 30, data may be presented to the output bus in either multiplexed or demultiplexed form depending on the setting of the 20bit/10bit input pin.

In 20-bit mode, $(20bit/\overline{10bit} = HIGH)$, the output data will be word aligned, demultiplexed luma and chroma data. Luma words will always appear on DOUT[19:10] while chroma words will occupy DOUT[9:0].

In 10-bit mode, (20bit/10bit = LOW), the output data will be word aligned, multiplexed luma and chroma data. The data will be presented on DOUT[19:10], and the device will force DOUT[9:0] LOW.

3.11.3 Parallel Output in DVB-ASI Mode

When operating in DVB-ASI mode, Section 3.8 on page 34, the GS9060 automatically configures the output port for 10-bit operation regardless of the setting of the 20bit/10bit pin.

The extracted 8-bit data words will be presented on DOUT[17:10] such that DOUT17 = HOUT is the most significant bit of the decoded transport stream data and DOUT10 = AOUT is the least significant bit.

In addition, DOUT19 and DOUT18 will be configured as the DVB-ASI status signals SYNCOUT and WORDERR respectively. See Section 3.8.3 on page 35 for a description of these DVB-ASI specific output signals.

DOUT[9:0] will be forced LOW when the GS9060 is operating in DVB-ASI mode.

3.11.4 Parallel Output in Data-Through Mode

When operating in Data-Through mode, Section 3.9 on page 36, the GS9060 presents data to the output data bus without performing any decoding, descrambling or word-alignment.

3.11.5 Parallel Output Clock (PCLK)

The frequency of the PCLK output signal of the GS9060 is determined by the output data format. Table 3-15 below lists the possible output signal formats and their corresponding parallel clock rates. Note that DVB-ASI output will always be in 10-bit format, regardless of the setting of the 20bit/10bit pin.

Table 3-15: Parallel Data Output Format

Output Data Format	DOUT [19:10]	DOUT	PCLK	Input Control Signals			
	[13:10]	[9:0]		20bit/10bit	SMPTE_BYPASS	DVB_ASI	
SMPTE Mode							
20bit DEMULTIPLEXED	LUMA	CHROMA	13.5MHz	HIGH	HIGH	LOW	
10bit MULTIPLEXED	LUMA / CHROMA	FORCED LOW	27MHz	LOW	HIGH	LOW	
DVB-ASI Mode							
10bit DVB-ASI	DVB-ASI DATA	FORCED LOW	27MHz	HIGH	LOW	HIGH	
	DVB-ASI DATA	FORCED LOW	27MHz	LOW	LOW	HIGH	
Data-Through Mode							
20bit DEMULTIPLEXED	DATA	DATA	13.5MHz	HIGH	LOW	LOW	
10bit MULTIPLEXED	DATA	FORCED LOW	27MHz	LOW	LOW	LOW	

3.12 GSPI Host Interface

The GSPI, or Gennum Serial Peripheral Interface, is a 4-wire interface provided to allow the host to enable additional features of the device and /or to provide additional status information through configuration registers in the GS9060.

The GSPI comprises a serial data input signal SDIN, serial data output signal SDOUT, an active low chip select \overline{CS} , and a burst clock SCLK. The burst clock must have a duty cycle between 40% and 60%.

Because these pins are shared with the JTAG interface port, an additional control signal pin JTAG/HOST is provided. When JTAG/HOST is LOW, the GSPI interface is enabled.

When operating in GSPI mode, the SCLK, SDIN, and \overline{CS} signals are provided by the host interface. The SDOUT pin is a high-impedance output allowing multiple devices to be connected in parallel and selected via the \overline{CS} input. The interface is illustrated in Figure 3-8.

All read or write access to the GS9060 is initiated and terminated by the host processor. Each access always begins with a 16-bit command word on SDIN indicating the address of the register of interest. This is followed by a 16-bit data word on SDIN in write mode, or a 16-bit data word on SDOUT in read mode.

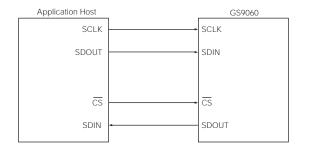


Figure 3-8: Gennum Serial Peripheral Interface (GSPI)

3.12.1 Command Word Description

The command word is transmitted MSB first and contains a read/write bit, nine reserved bits and a 6-bit register address. Set R/W = '1' to read and R/W = '0' to write from the GSPI.

Command words are clocked into the GS9060 on the rising edge of the serial clock SCLK. The appropriate chip select, \overline{CS} , signal must be asserted low a minimum of 1.5ns (t₀ in Figure 3-11 and Figure 3-12) before the first clock edge to ensure proper operation.

Each command word must be followed by only one data word to ensure proper operation.








Figure 3-10: Data Word

3.12.2 Data Read and Write Timing

Read and write mode timing for the GSPI interface is shown in Figure 3-11 and Figure 3-12 respectively. The maximum SCLK frequency allowed is 6.6MHz.

When writing to the registers via the GSPI, the MSB of the data word may be presented to SDIN immediately following the falling edge of the LSB of the command word. All SDIN data is sampled on the rising edge of SCLK.

When reading from the registers via the GSPI, the MSB of the data word will be available on SDOUT 12ns (t_5 in Figure 3-11) following the falling edge of the LSB of the command word, and thus may be read by the host on the very next rising edge of the clock. The remaining bits are clocked out by the GS9060 on the negative edges of SCLK.

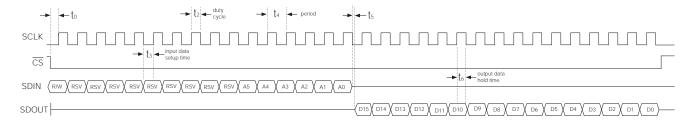






Figure 3-12: GSPI Write Mode Timing

3.12.3 Configuration and Status Registers

Table 3-16 summarizes the GS9060's internal status and configuration registers.

All of these registers are available to the host via the GSPI and are all individually addressable.

Where status registers contain less than the full 16 bits of information however, two or more registers may be combined at a single logical address.

Table 3-16: GS9060 internal registers

Address	Register Name	See Section
00h	IOPROC_DISABLE	Section 3.10.6 on page 46
01h	ERROR_STATUS	Section 3.10.5 on page 42
03h	EDH_FLAG	Section 3.10.7 on page 48
04h	VIDEO_STANDARD	Section 3.10.4 on page 39
05h - 09h	ANC_TYPE	Section 3.10.2.1 on page 37
0Ch - 0Dh	VIDEO_FORMAT	Section 3.10.3 on page 39
0Eh - 11h	RASTER_STRUCTURE	Section 3.10.4 on page 39
12h - 19h	EDH_CALC_RANGES	Section 3.10.5.2 on page 44
1Ah	ERROR_MASK	Section 3.10.5 on page 42

3.13 JTAG


When the JTAG/HOST input pin of the GS9060 is set HIGH, the host interface port will be configured for JTAG test operation. In this mode, pins 27 through 30 become TMS, TDO, TDI, and TCK. In addition, the RESET_TRST pin will operate as the test reset pin.


Boundary scan testing using the JTAG interface will be enabled in this mode.

There are two methods in which JTAG can be used on the GS9060:

- 1. As a stand-alone JTAG interface to be used at in-circuit ATE (Automatic Test Equipment) during PCB assembly; or
- 2. Under control of the host for applications such as system power on self tests.

When the JTAG tests are applied by ATE, care must be taken to disable any other devices driving the digital I/O pins. If the tests are to be applied only at ATE, this can be accomplished with tri-state buffers used in conjunction with the JTAG/HOST input signal. This is shown in Figure 3-13.

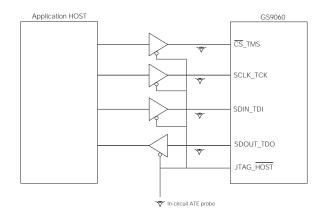



Alternatively, if the test capabilities are to be used in the system, the host may still control the JTAG/HOST input signal, but some means for tri-stating the host must exist in order to use the interface at ATE. This is represented in Figure 3-14.

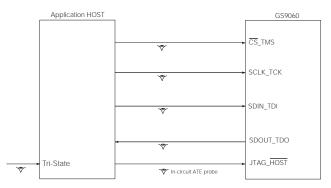


Figure 3-14: System JTAG

Please contact your Gennum representative to obtain the BSDL model for the GS9060.

3.14 Device Power Up

Because the GS9060 is designed to operate in a multi-volt environment, any power up sequence is allowed. The charge pump, phase detector, core logic, serial digital input/output buffers and digital I/O buffers should all be powered up within 1ms of one another.

Device pins may also be driven prior to power up without causing damage.

To ensure that all internal registers are cleared upon power-up, the application layer must hold the RESET_TRST signal LOW for a minimum of 1ms after the core power supply has reached the minimum level specified in the DC Electrical Characteristics Table Table 2-1. See Figure 3-15.

3.15 Device Reset

In order to initialize all internal operating conditions to their default states the application layer must hold the \overrightarrow{RESET} _TRST signal LOW for a minimum of $t_{reset} = 1$ ms.

When held in reset, all device outputs will be driven to a high-impedance state.

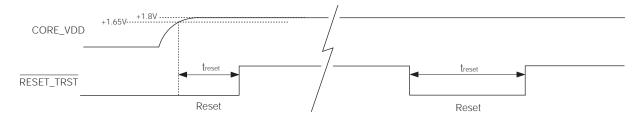



Figure 3-15: Reset Pulse

GS9060 Data Sheet


GENNUM

4. Application Reference Design

4.1 Typical Application Circuit (Part A)

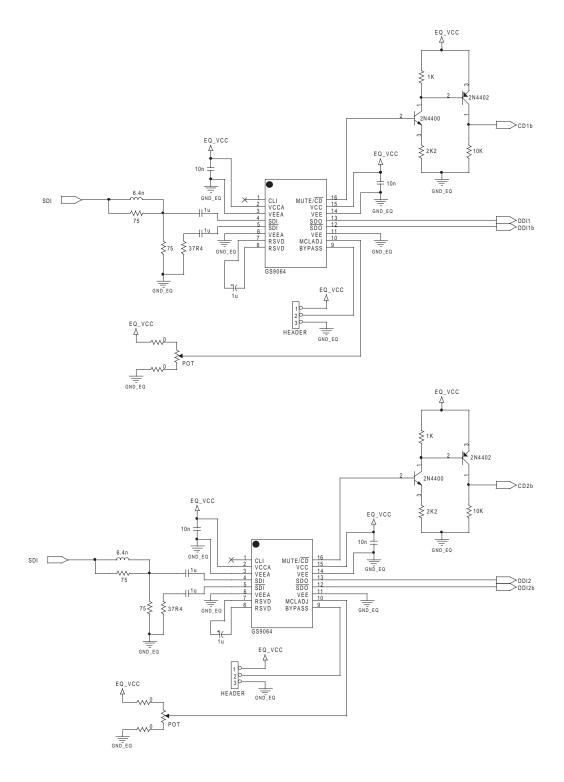

4.2 Typical Application Circuit (Part B)

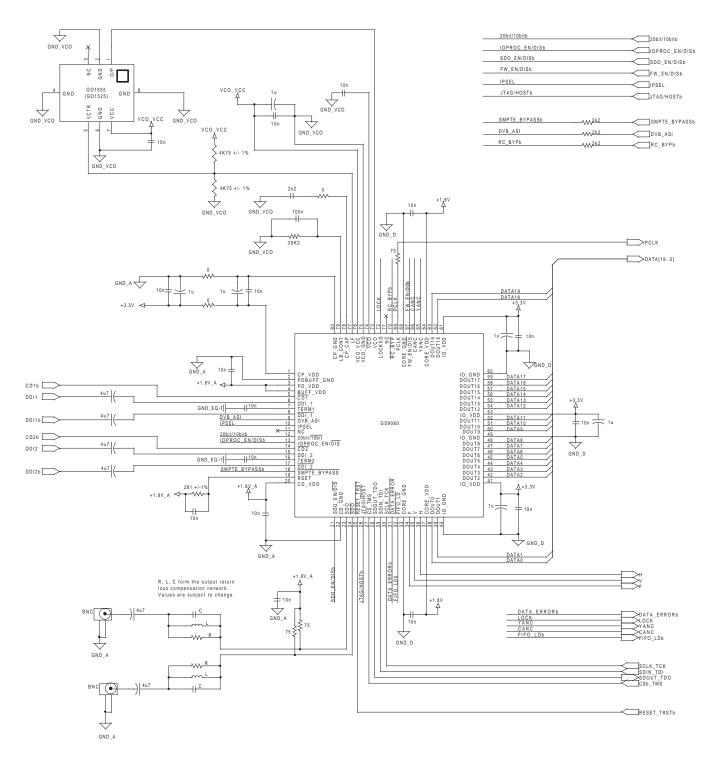

5. References & Relevant Standards


SMPTE 125M	Component video signal 4:2:2 – bit parallel interface	
SMPTE 291M	Ancillary Data Packet and Space Formatting	
SMPTE 293M	720 x 483 active line at 59.94 Hz progressive scan production – digital representation	
SMPTE 352M	Video Payload Identification for Digital Television Interfaces	
SMPTE RP165	Error Detection Checkwords and Status Flags for Use in Bit-Serial Digital Interfaces for Television	
SMPTE RP168	Definition of Vertical Interval Switching Point for Synchronous Video Switching	


GS9060 Data Sheet

GENNUM

6. Package & Ordering Information

6.1 Package Dimensions

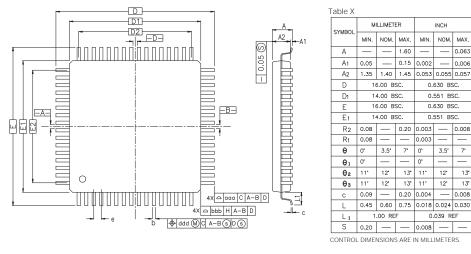

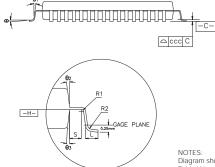

-1		0	;	0.09		· 0	.20	0.004	_	0.008
1		L		0.45	0.6	0 0	.75	0.018	0.024	0.030
		1 1.00 REF				0.039 REF				
		5	5	0.20	_		_	0.008		_
CON			TROL	DIME	NSIO	NS A	RE	IN MIL	LIMETE	RS.
	Table Y									
1	SYMBO	DL				6	OL			
	b e		MILLIMETER				INCH			
			MI	N NO	DМ	MA	<	MIN	NOM	MAX
			0.22	2 0.	30	0.3	3	0.009	0.012	0.015
			0.65 BSC					0.026 BSC		
	D2		12.35				0.486			
	E2			12	.35		Τ	0.486		
	TOLERANCES OF FORM AND POSITION									
	aaa		0.20				0.008			
	bbb		0.20				0.008			
	CCC		0.10				0.004			
	ddd		0.13			T	0.005			

Diagram shown is representative only. Table X is fixed for all pin sizes, and Table Y is specific to the 80-pin package.

1. DIMENSIONS D1 AND E1 DO NOT INCLUDE MOLD PROTRUSION. ALLOWABLE PROTRUSION IS 0.25mm PER SIDE D1 AND E1 ARE MAXIMUM PLASTIC BODY SIZE DIMENSIONS INCLUDING MOLD MISMATCH.

MISMATCH. 2. DIMENSION & DOES NOT INCLUDE DAMBAR PROTRUSION. ALLOWABLE DAMBAR PROTRUSION SHALL NOT CAUSE THE LEAD WIDTH TO EXCEED THE MAXIMUM & DIMENSION BY MORE THAN 0.08mm. DAMBAR CAN NOT BE LOCATED ON THE LOWER RADIUS OR THE FOOT. MINIMUM SPACE BETWEEN PROTRUSION AND AN ADJACENT LEAD IS 0.07mm FOR 0.4mm AND 0.5mm PITCH PACKAGES.

6.2 Packaging Data

Parameter	Value		
Package Type	14mm x 14mm 80-pin LQFP		
Package Drawing Reference	JEDEC MS026		
Moisture Sensitivity Level	3		
Junction to Case Thermal Resistance, $\theta_{j\text{-}c}$	11.6°C/W		
Junction to Air Thermal Resistance, $\theta_{j\text{-}a}$ (at zero airflow)	39.9°C/W		
Psi	0.6°C/W		
Pb-free and RoHS Compliant	Yes		


6.3 Ordering Information

Part Number	Pb-free and RoHS Compliant	Package	Temperature Range
GS9060-CF	No	80-pin LQFP	0°C to 70°C
GS9060-CFE3	Yes	80-pin LQFP	0°C to 70°C

7. Revision History

Table 7-1: Revision History

Version	ECR	PCN	Date	Changes and/or Modifications
2	133885	-	May 2004	Converted GS9060 to new template format. Moved ESD to maximum absolute ratings. Modified description of LOCKED pin in Data Through mode. Added note to host interface pins. Added Pb-free and Green availability and ordering information. Corrected minor typing errors
3	134908	-	November 2004	Added Solder Reflow Profile description. Added DVB-ASI packet counter information. Added Packaging Data section. Corrected Typical Application Circuit.
4	135365	-	February 2005	Corrected voltage divider resistors on LF line in Typical Application Circuit to reflect that they are 1% tolerant.
5	136664	-	May 2005	Updated the status of the VD_STD[4:0] and STD_LOCK bits following a device reset or the removal of the input video. Changed the GSPI Input Data Hold Time to a minimum instead of a maximum. Updated 'Green' references to read 'RoHS Compliant'.
6	138008	_	September 2005	Converted to Data Sheet. Added TERM pin to Serial Digital Input diagram. Corrected Solder Reflow profile labels.
7	138451	37276	November 2005	Corrected incorrect parameter label for Moisture Sensitivity Level from "Moisture Saturation Level" in Section 6.2 on page 60.
8	143667	42774	January 2007	Recommended GO1555 VCO for new designs.



The product is in production. Gennum reserves the right to make changes to the product at any time without notice to improve reliability, function or design, in order to provide the best product possible.

GENNUM CORPORATION Mailing Address: P.O. Box 489, Stn. A, Burlington, Ontario, Canada L7R 3Y3 Shipping Address: 170 Faser Drive, Burlington, Ontario, Canada L7L 5P5 Tel. +1 (905) 632-2996 Fax. +1 (905) 632-5946 **GENNUM JAPAN CORPORATION** Shinjuku Green Tower Building 27F, 6-14-1, Nishi Shinjuku, Shinjuku-ku, Tokyo, 160-0023 Japan Tel. +81 (03) 3349-5501, Fax. +81 (03) 3349-5505 **GENNUM UK LIMITED** 25 Long Garden Walk, Farnham, Surrey, England GU9 7HX Tel. +44 (0)1252 747 000 Fax +44 (0)1252 726 523 Gennum Corporation assumes no liability for any errors or omissions in this document, or for the use of the circuits or devices described herein. The sale of the circuit or device described herein does not imply any patent license, and Gennum makes no representation that the circuit or device is free from patent infringement. GENNUM and the G logo are registered trademarks of Gennum Corporation. © Copyright 2002 Gennum Corporation. All rights reserved. Printed in Canada.

www.gennum.com